

B809C / B810C



MEHRZWECK UBERDACHUNGS BAUSATZ

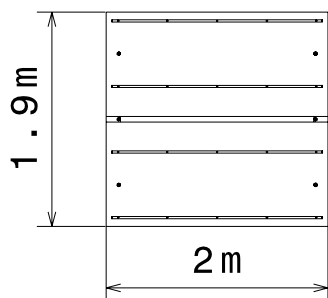
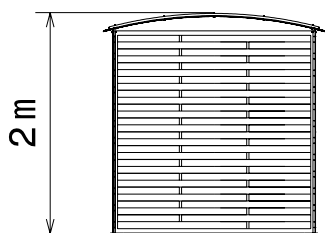
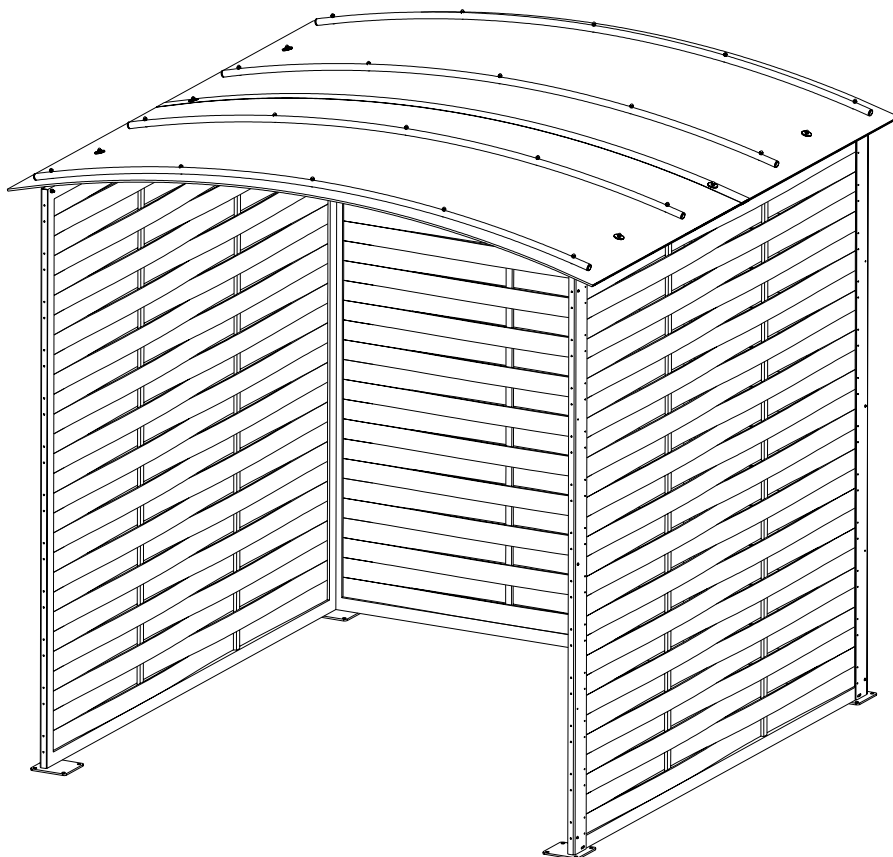
Conception et fabrication française

Notice de montage

Set up instructions

Gebruiksaanwijzing voor de montage

Montageanleitung



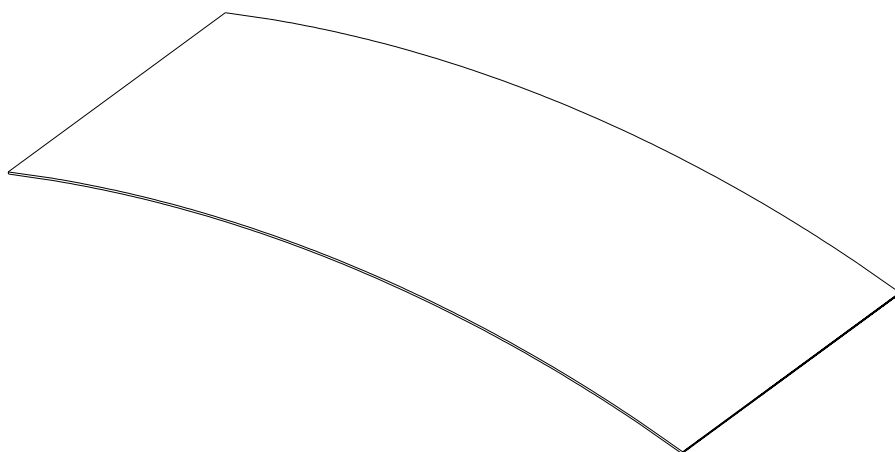
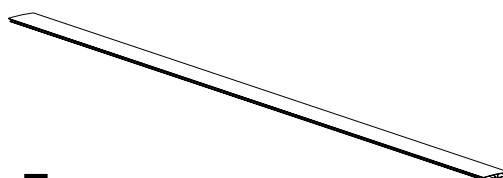
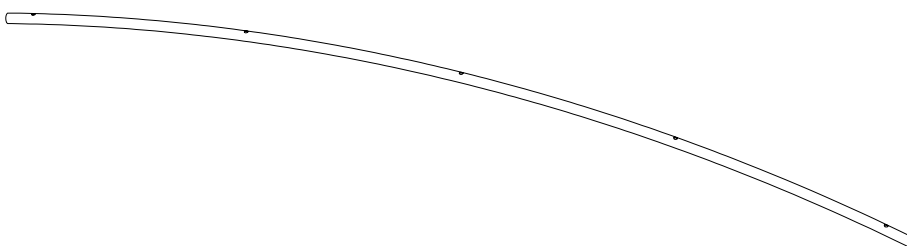
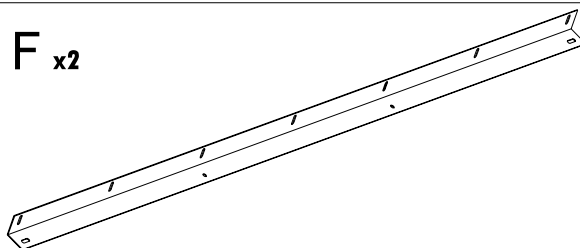


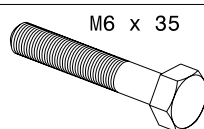
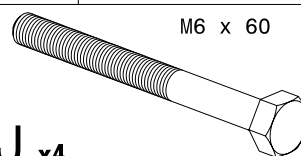




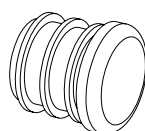
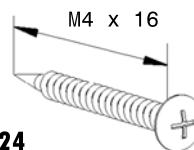
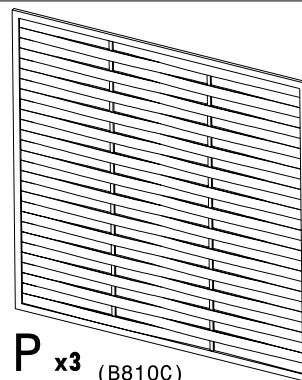
Lire impérativement la notice avant toute utilisation
Instructions should be read before any usage
Lees de gebruiksaanwijzing zeker goed door voor
Die Anleitung unbedingt vor jeder Verwendung lesen





CONB809C 10 061

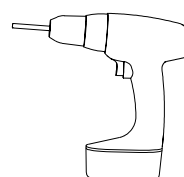

Page 1

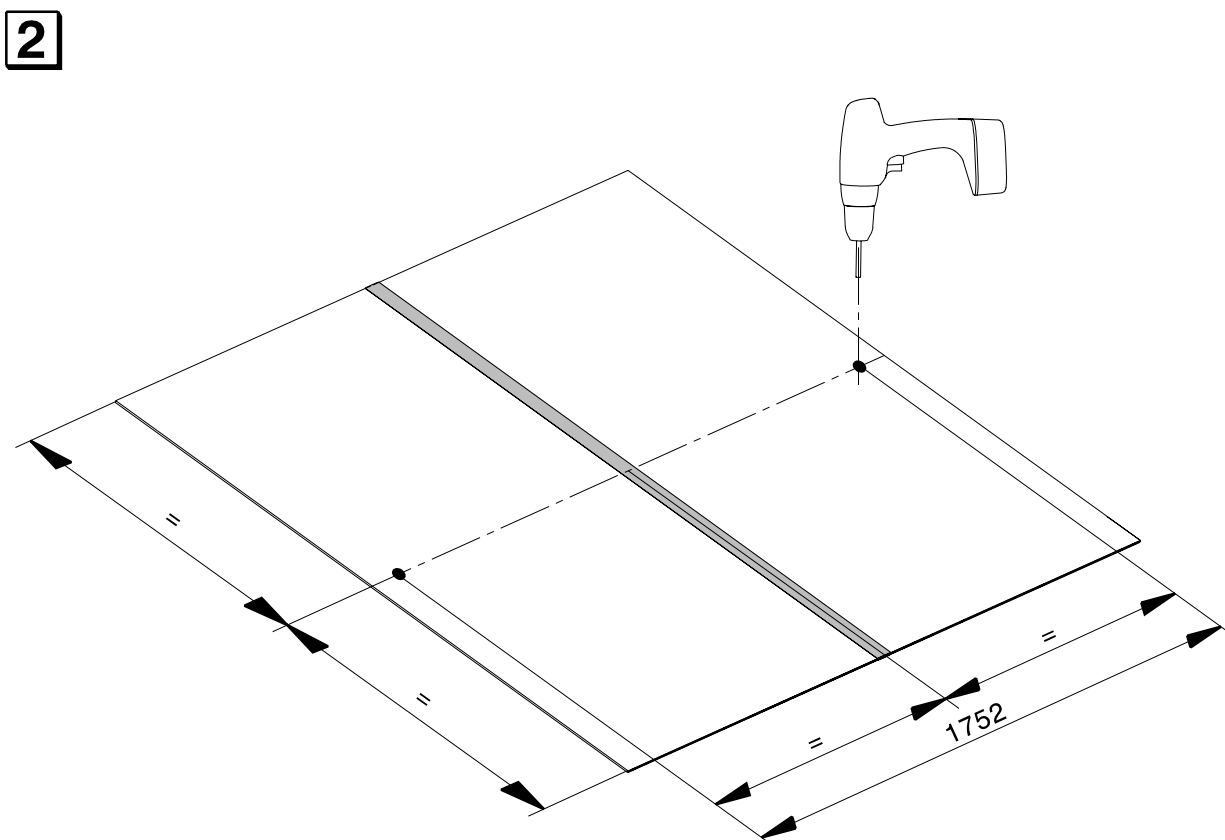
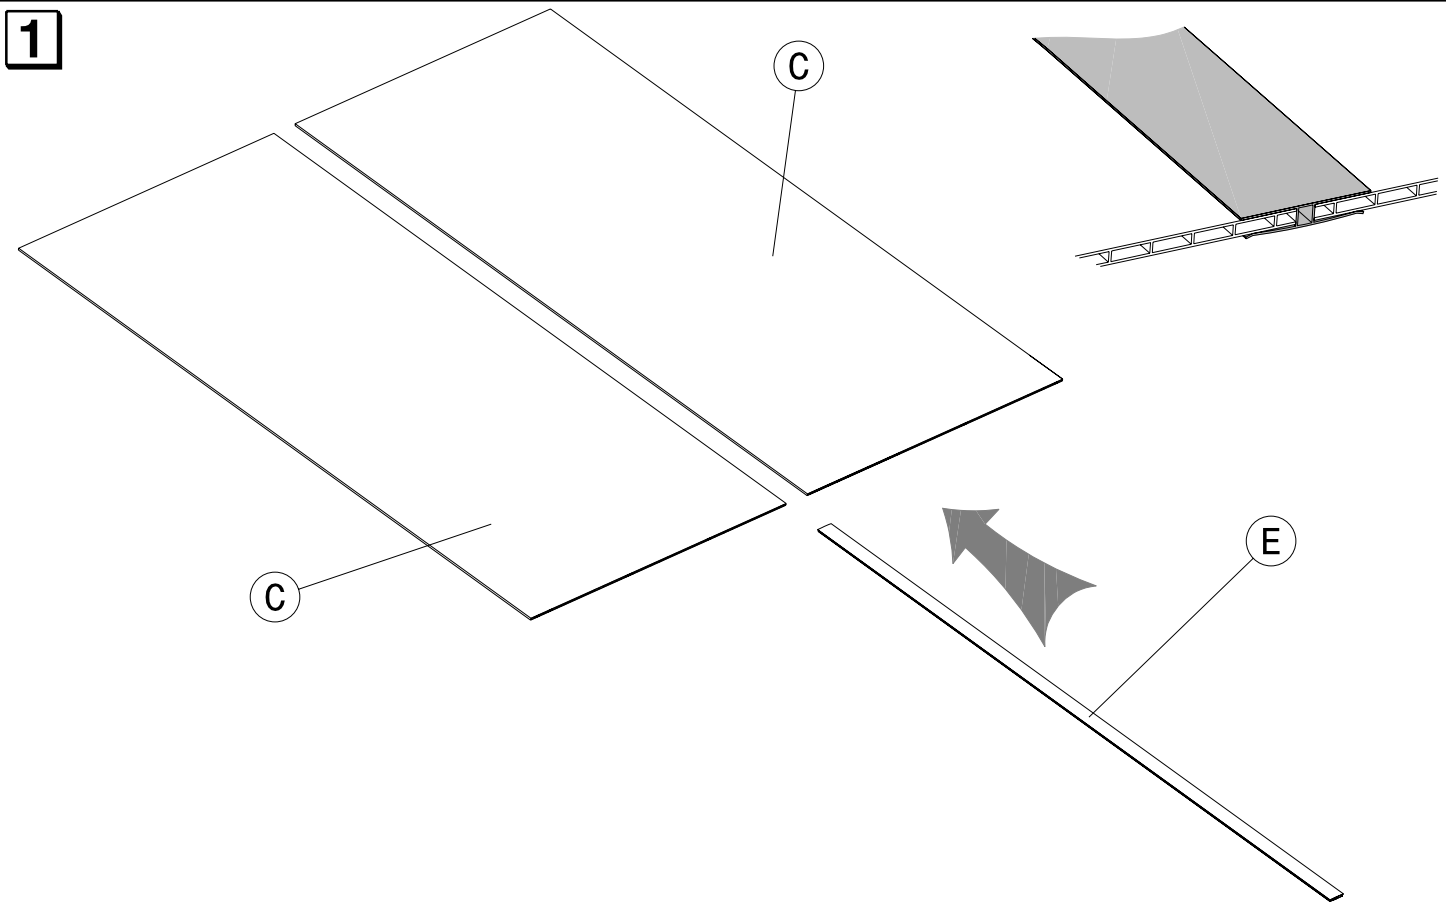
Composants/components/einzerteile/bestanddelen

A_{x2}

B_{x2}
C_{x2}

D_{x4}

E_{x1}

F_{x2}

G_{x6}

H_{x20}

I_{x4}

J_{x4}

K_{x22}

L_{x26}

M_{x4}

N_{x8}

O_{x24}

P_{x3} (B810C)

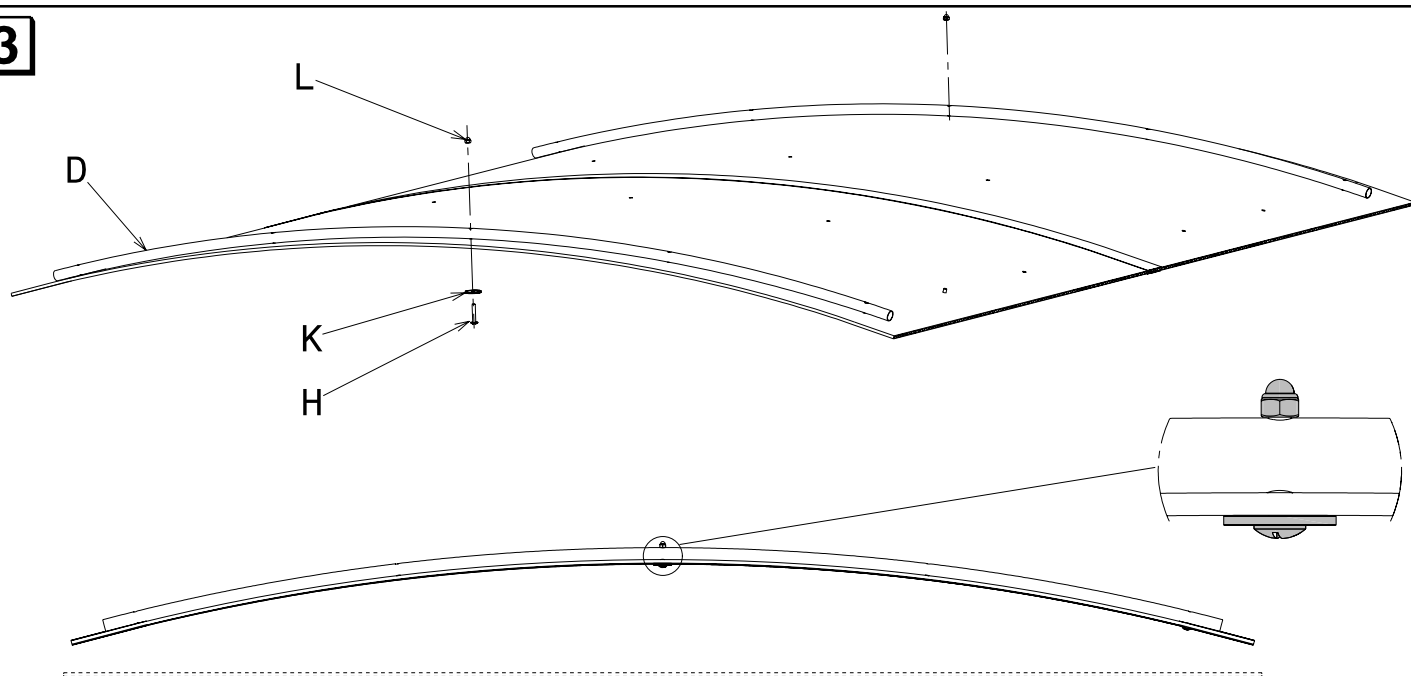
Outils nécessaires (non fournis) au montage
Tools required (not supplied) for assembly
Erforderliches Montagewerkzeug (nicht mitgeliefert)
Voor de montage benodigd gereedschap (niet meegeleverd)


x1

x2

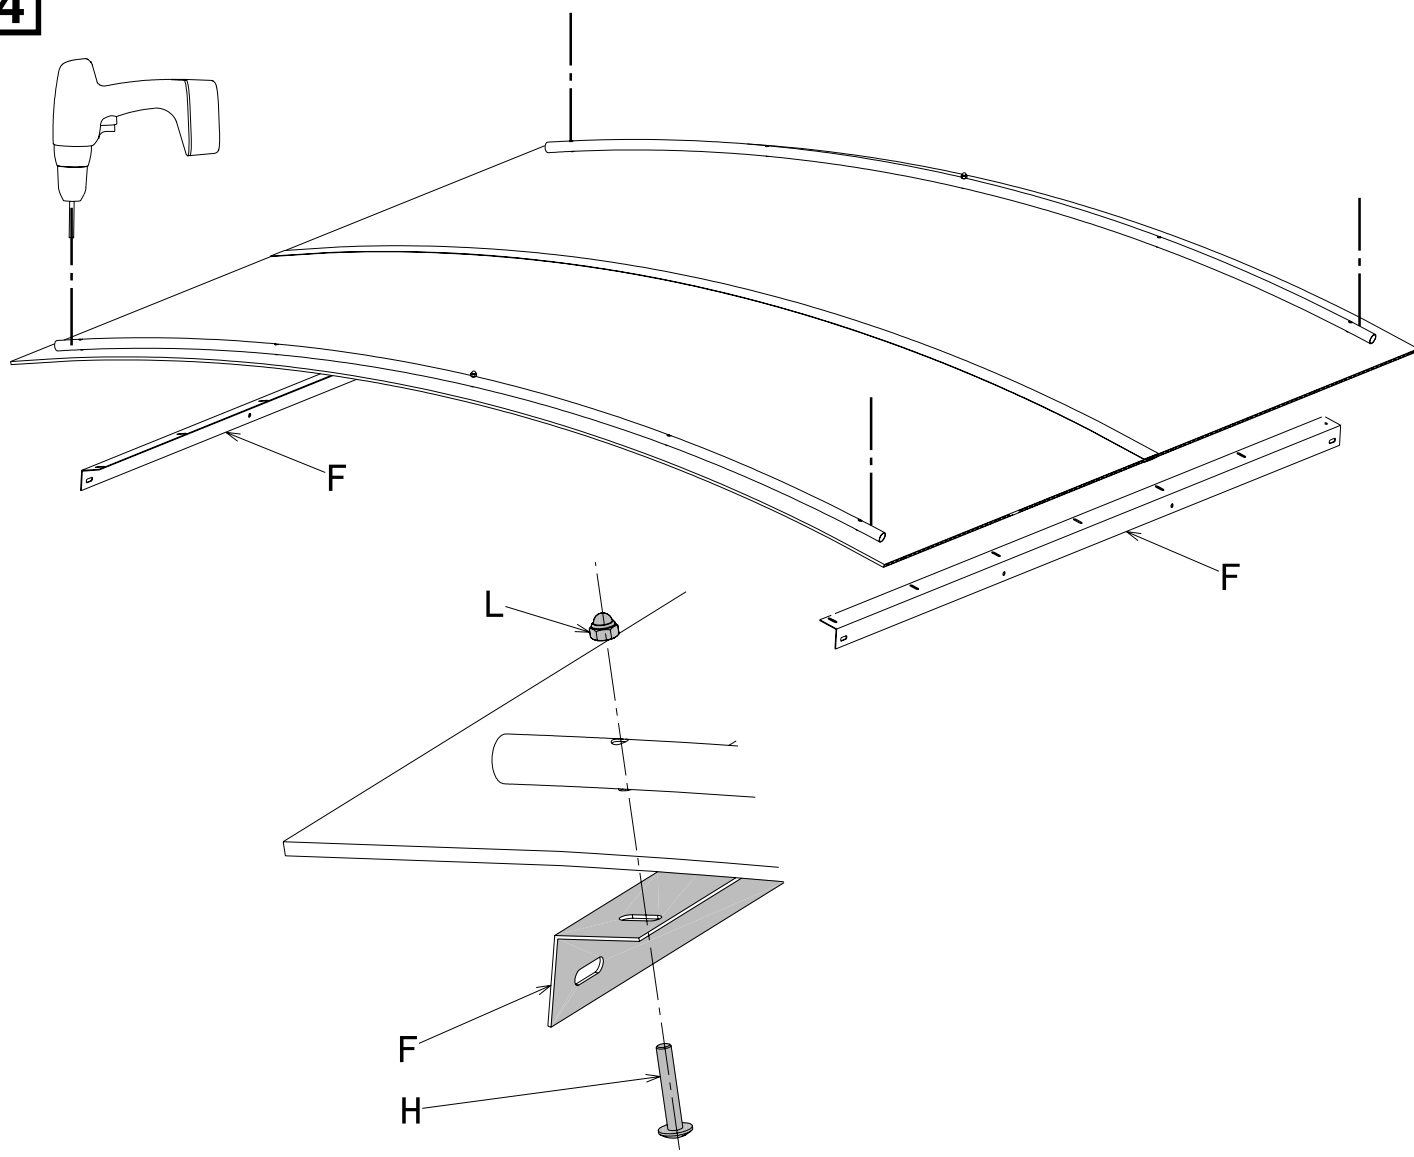
x1

x1




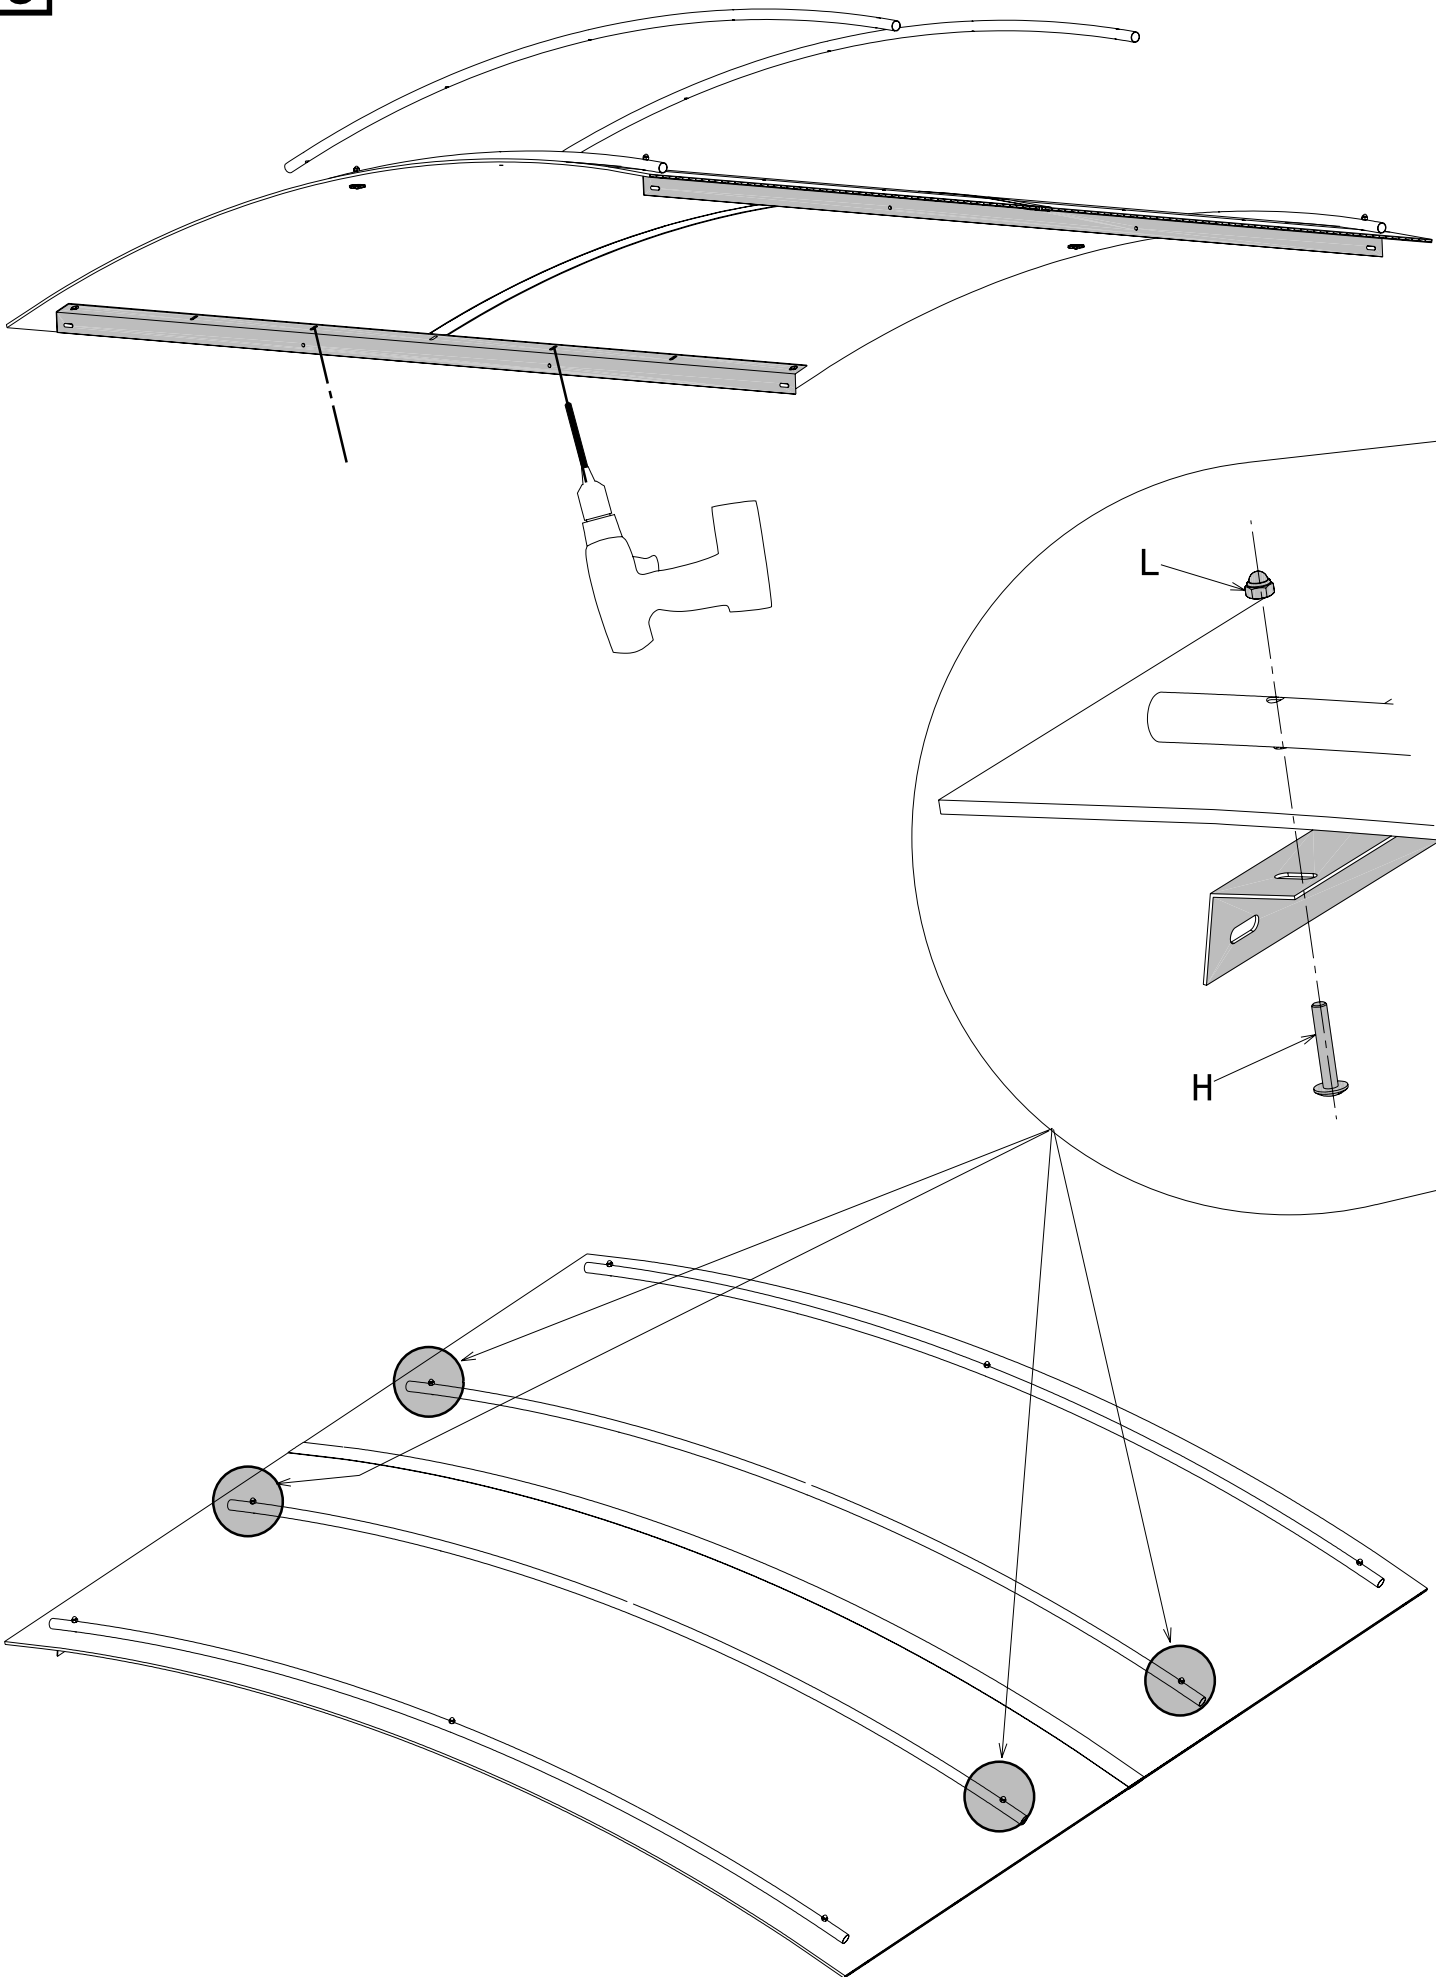
3



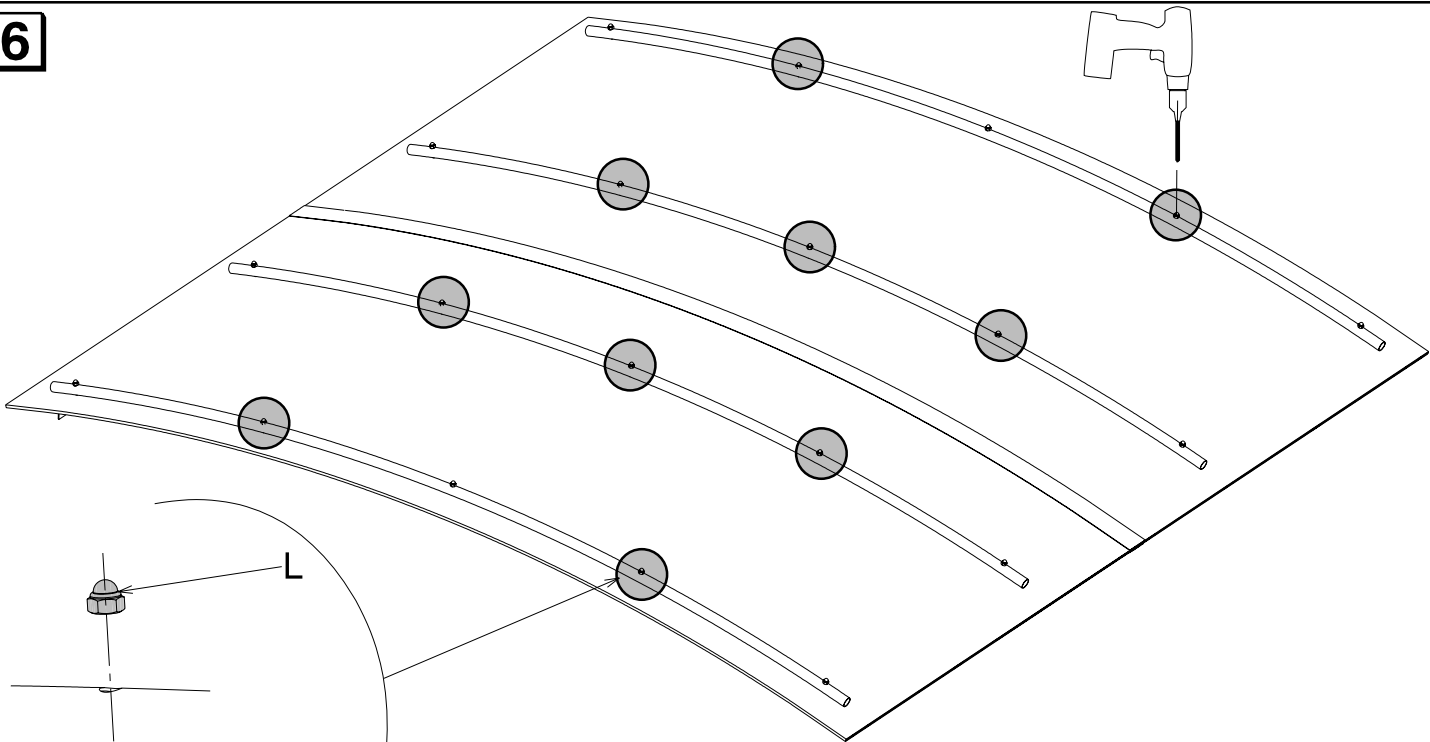
4



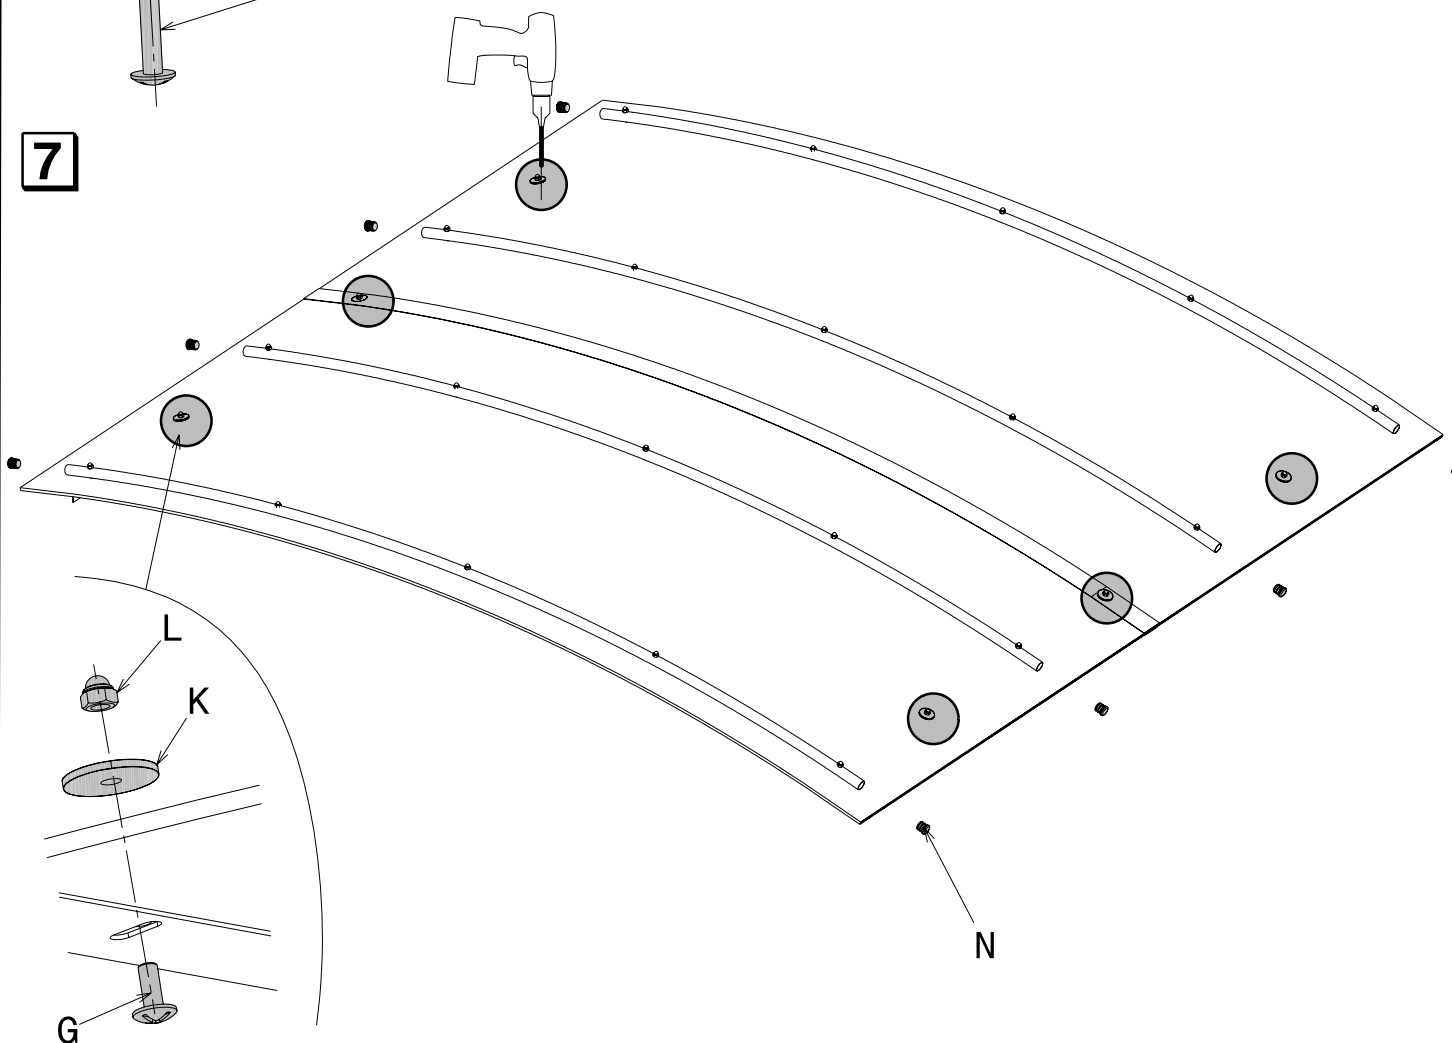
5



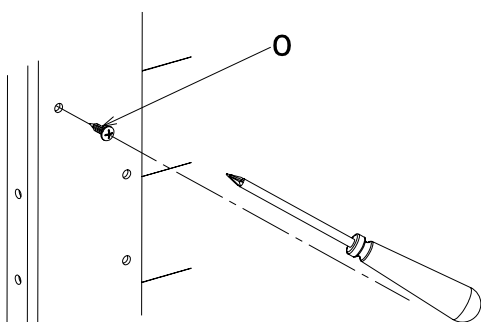
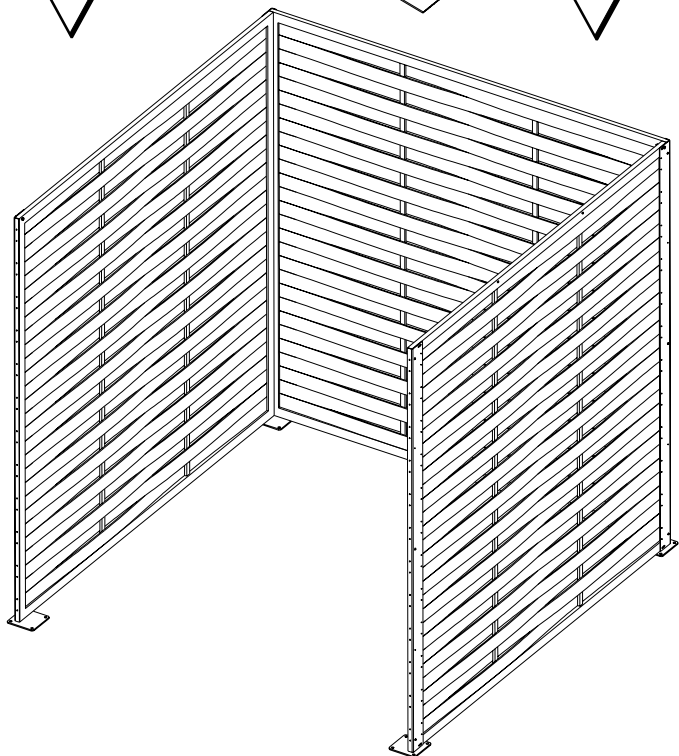
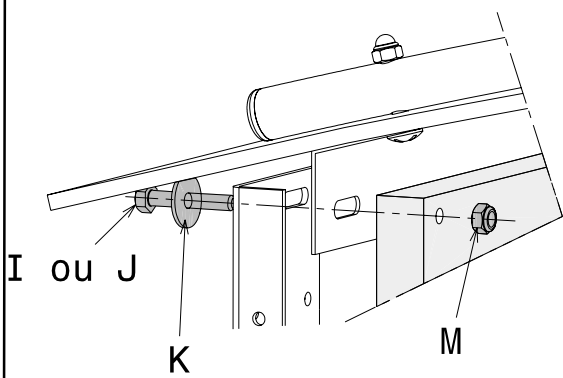
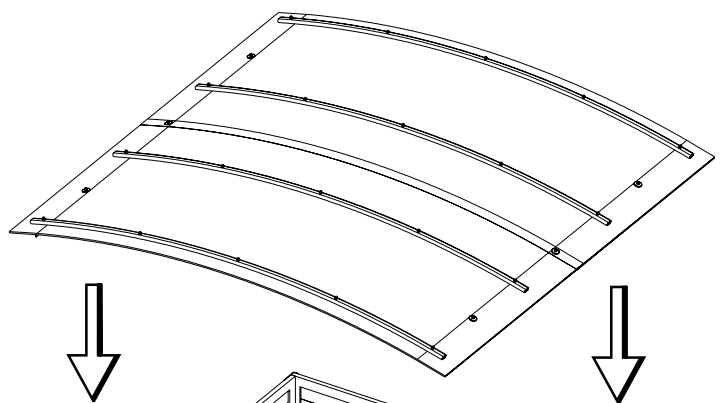
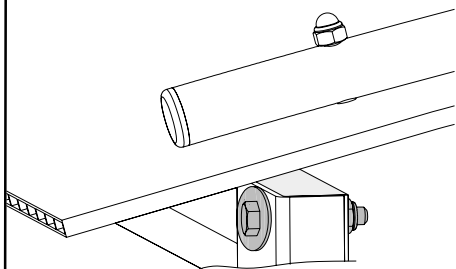
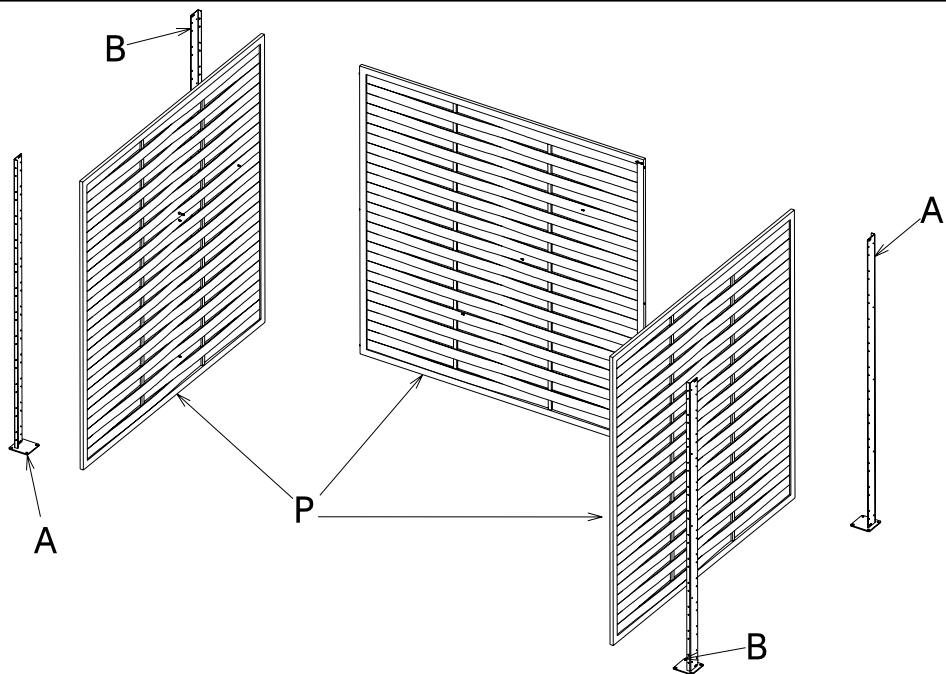
6

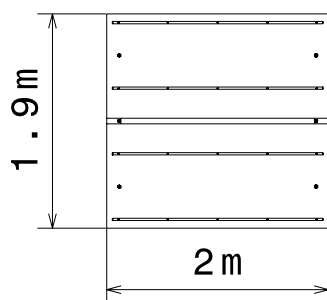
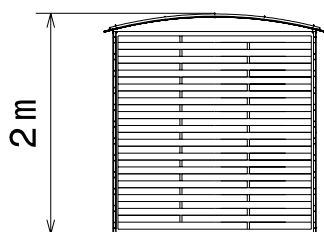
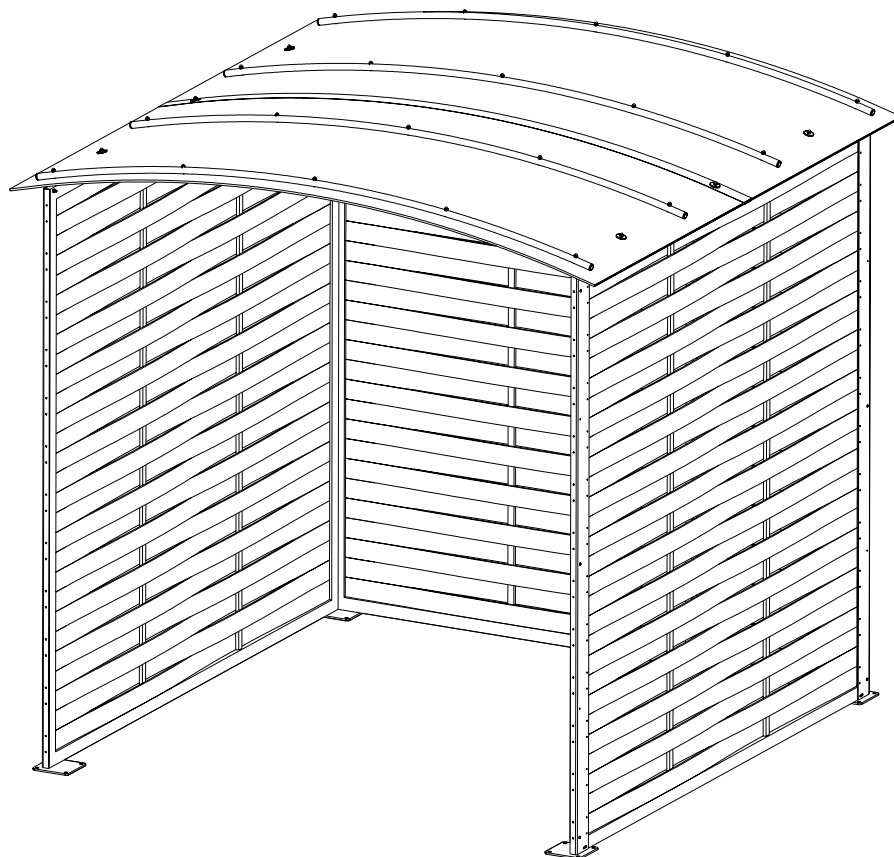


7



8





SAV

Joignable du lundi au vendredi : de 8.00 à 17.00.

Available from monday to friday : from 8.00 am to 5.00 pm.

Erreichbar vom Montag bis Freitag : 8 Uhr bis 17 Uhr.

Bereikbaar van maandag tot vrijdag : 8 uur tot 17 uur.



33 (0)3 20 10 90 25



33 (0)3 20 10 37 89



be-sav@mottez.com



<http://www.portevelo-mottez.com>



CONB809C 10 061

Page 8