


M107SE1N0

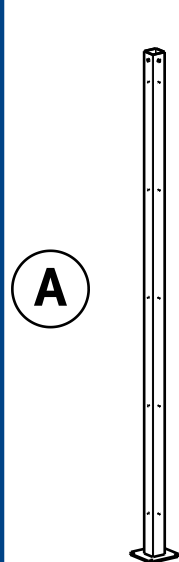

x18


PRM10711GR M107BAMSE1N0




x19

B


OU

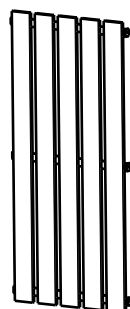

Voir notice
annexe pour les
panneaux bois

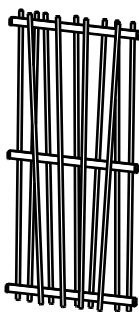


M107SE5N0

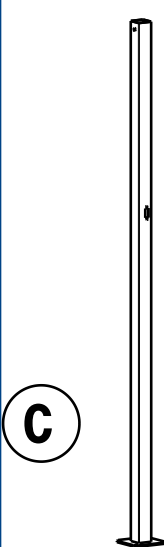


x1

M107SE20

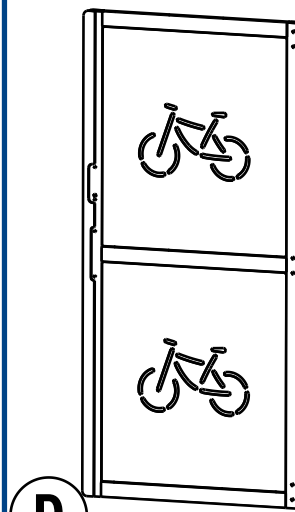


x1

M107SE4N0

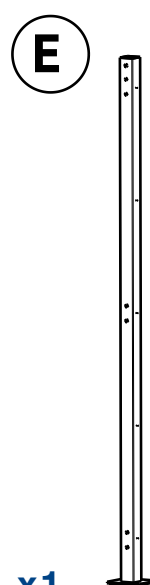


x1

M107SE7N0

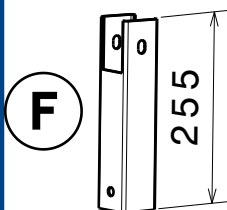


x6

M107SE8N0

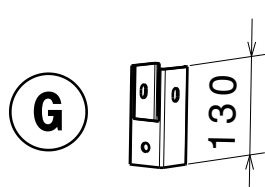


x6

M107SE101N0

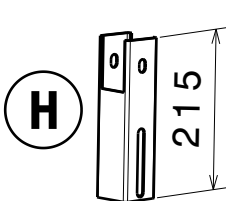


x8

M107SE9N0

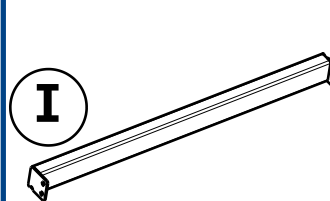


x20

PRM10717N0

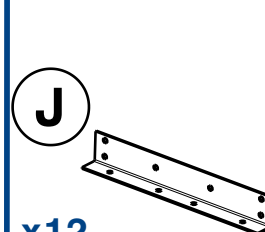


x12

M107SE10N0

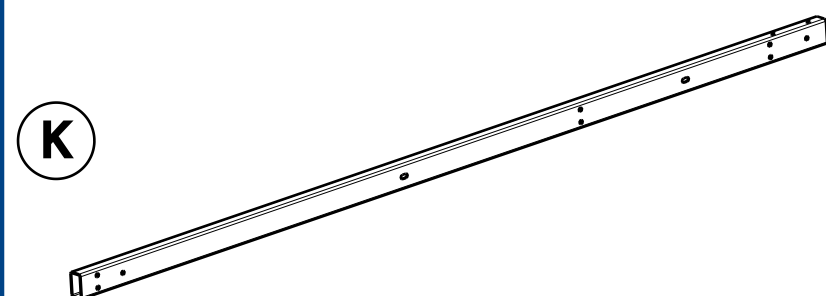


x12

PRM10718

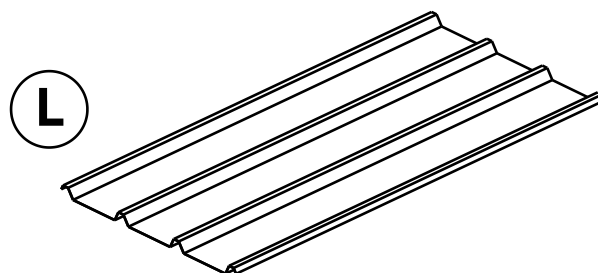


x15

PRM02606

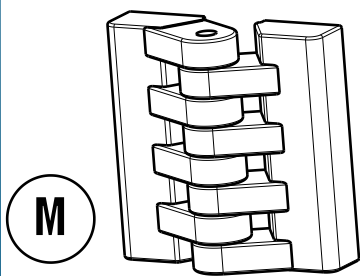

x3


PRM02619

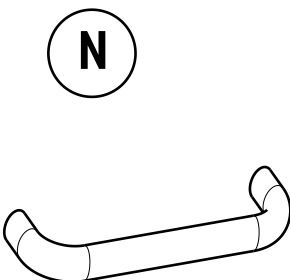

x1


PRM02618N

SERRURE DIGICODE
+ ACCESSOIRES

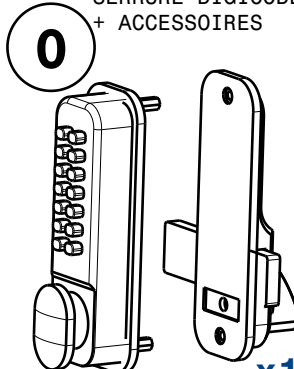


x1

VIH10 70




x46

VIH10 45



x6

VIH08 40



x2

VEH10NY




x154

VITH063 25




x300
ou
x225

VIH10 60




x84

VIH10 90




x24

EMR70 40I



x12

PRM10719

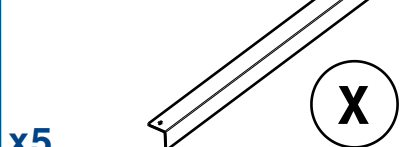

x5

EMH10



x320

EMH08




x2


2
6h



OUTILS NECESSAIRES AU MONTAGE (non fournis)

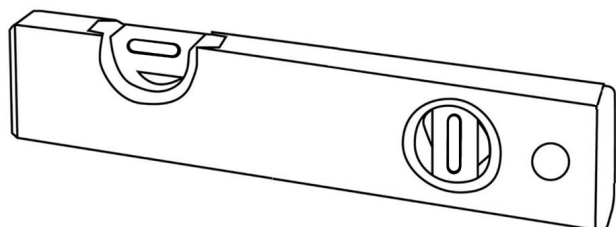

x1




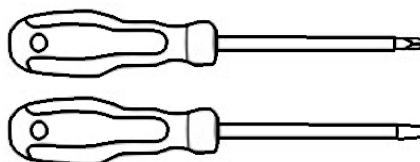


x2




x2 ou x4

Avec douille
de 10

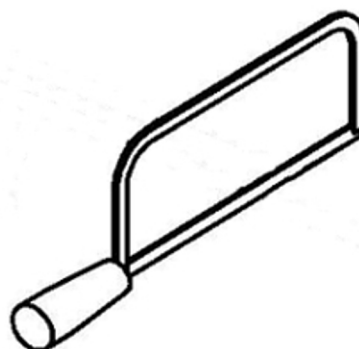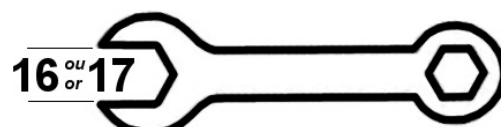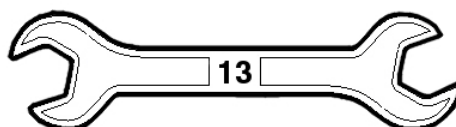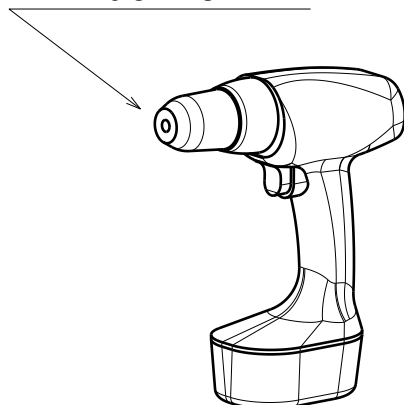


Scie à métaux

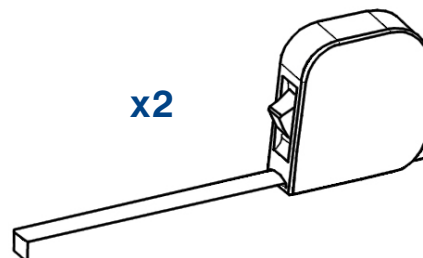

x2


1: Assemblage des tôles sur les poteaux

Détail A

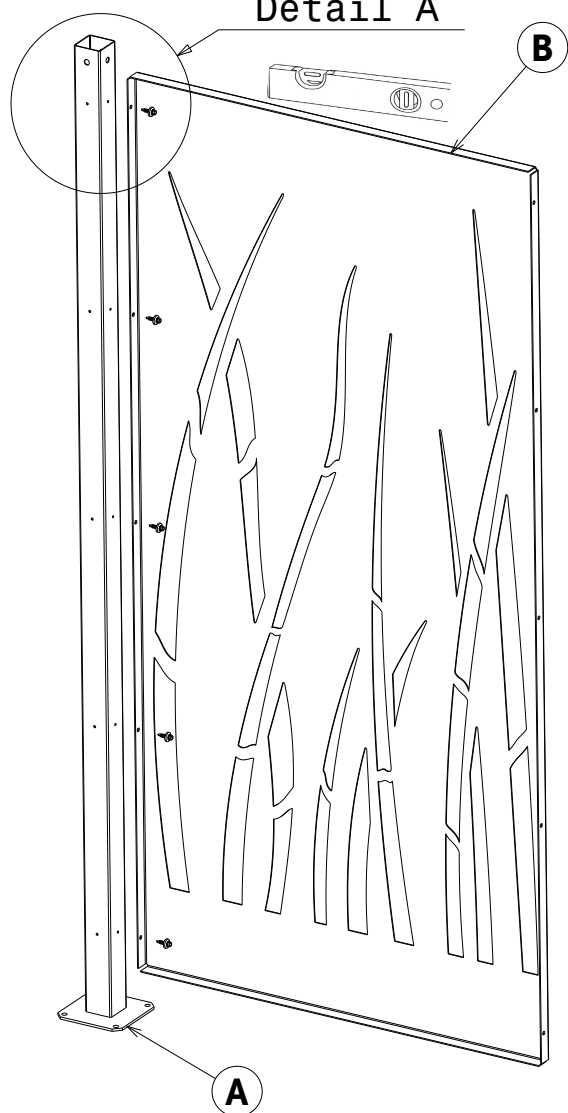


Détail A

Echelle : 1:3

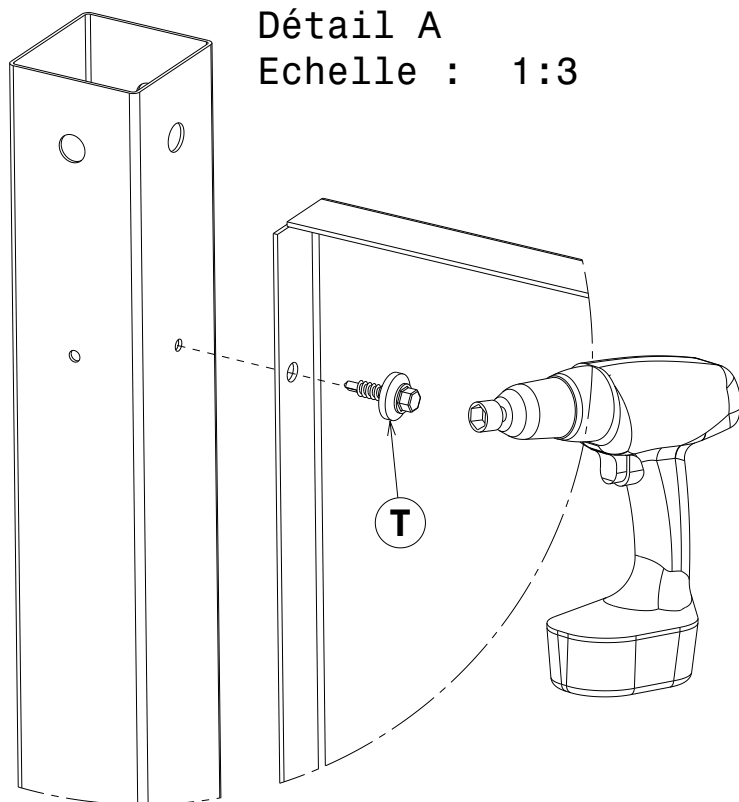


Poteaux spécifiques pour la porte

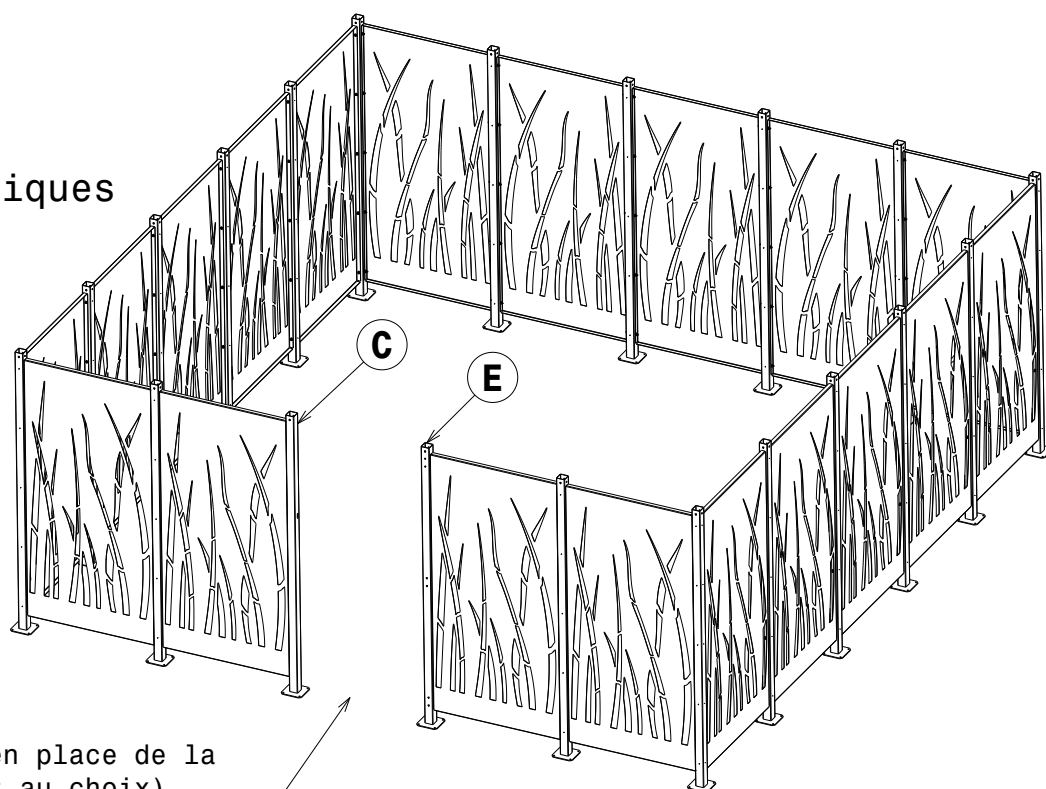






Ouverture pour mise en place de la porte (positionnement au choix)



2: Assemblage de la porte


utilisation serrure: voir notice fournie

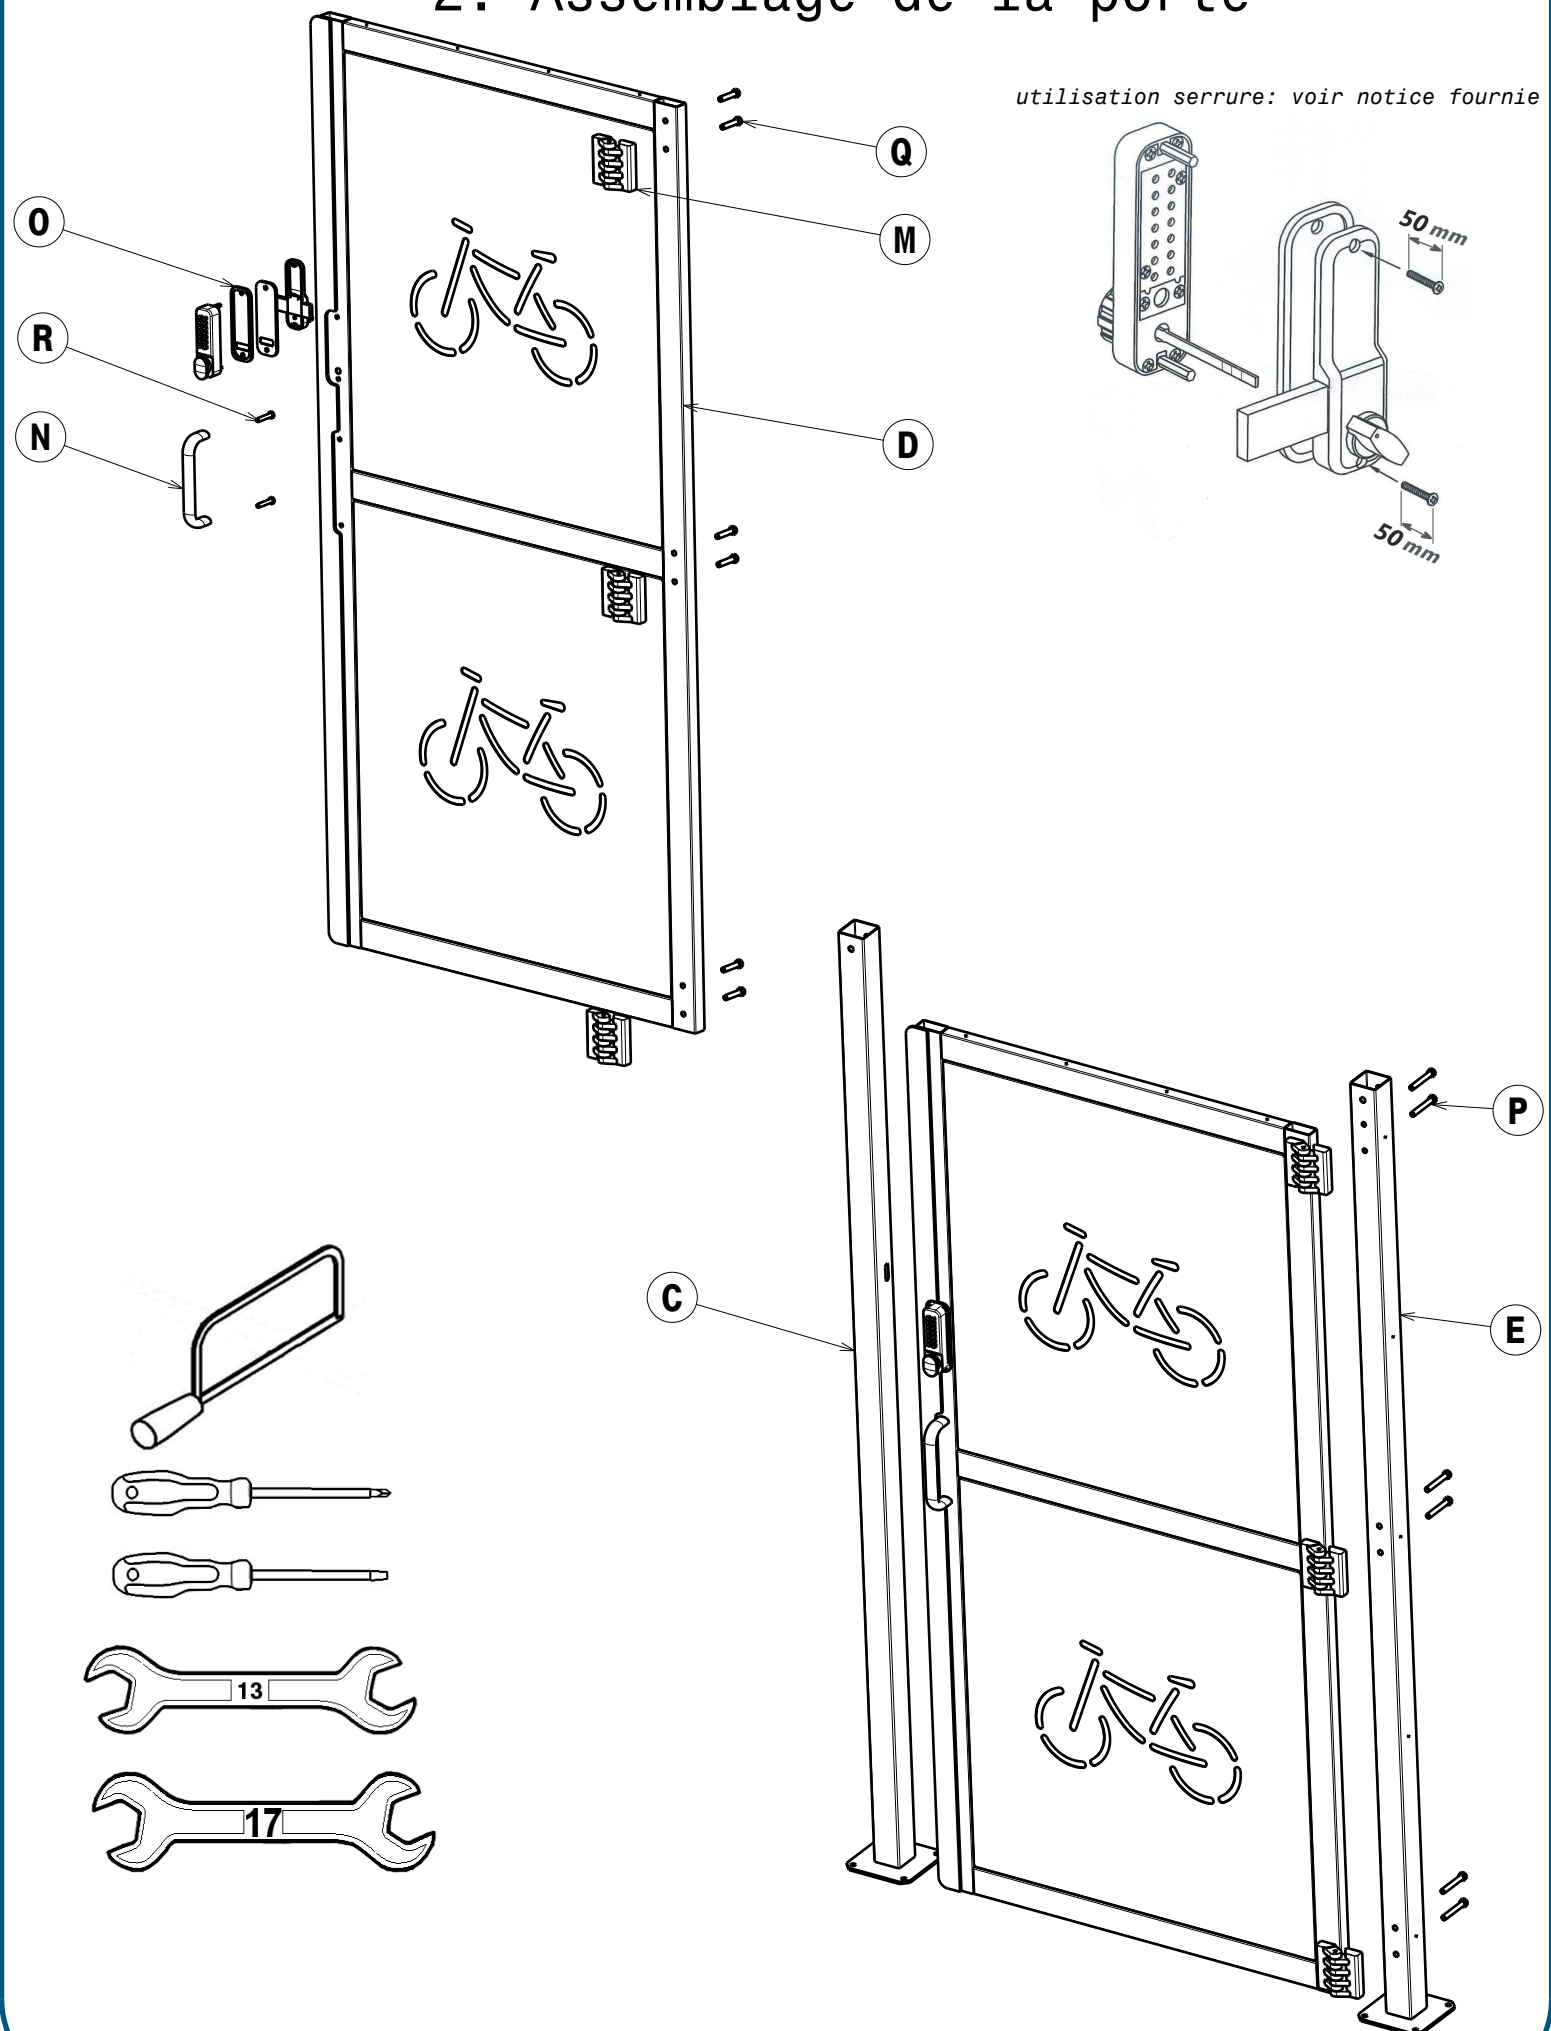


3: Assemblage de la toiture

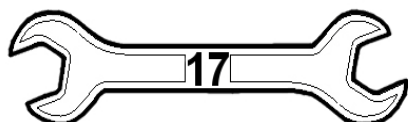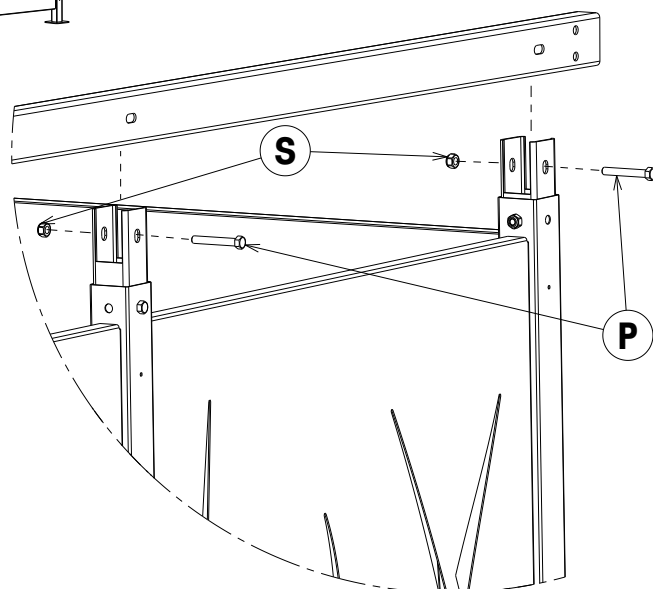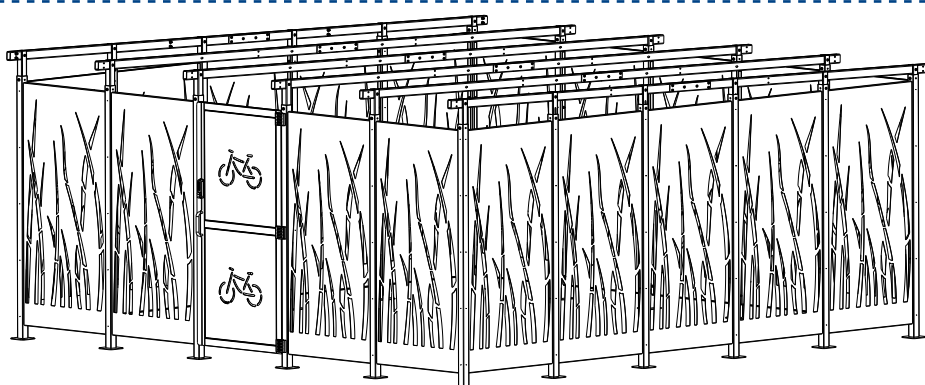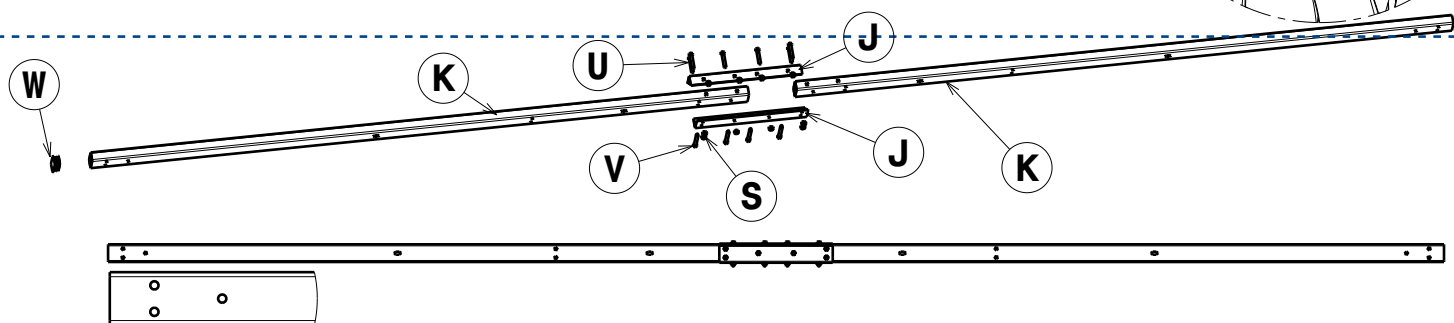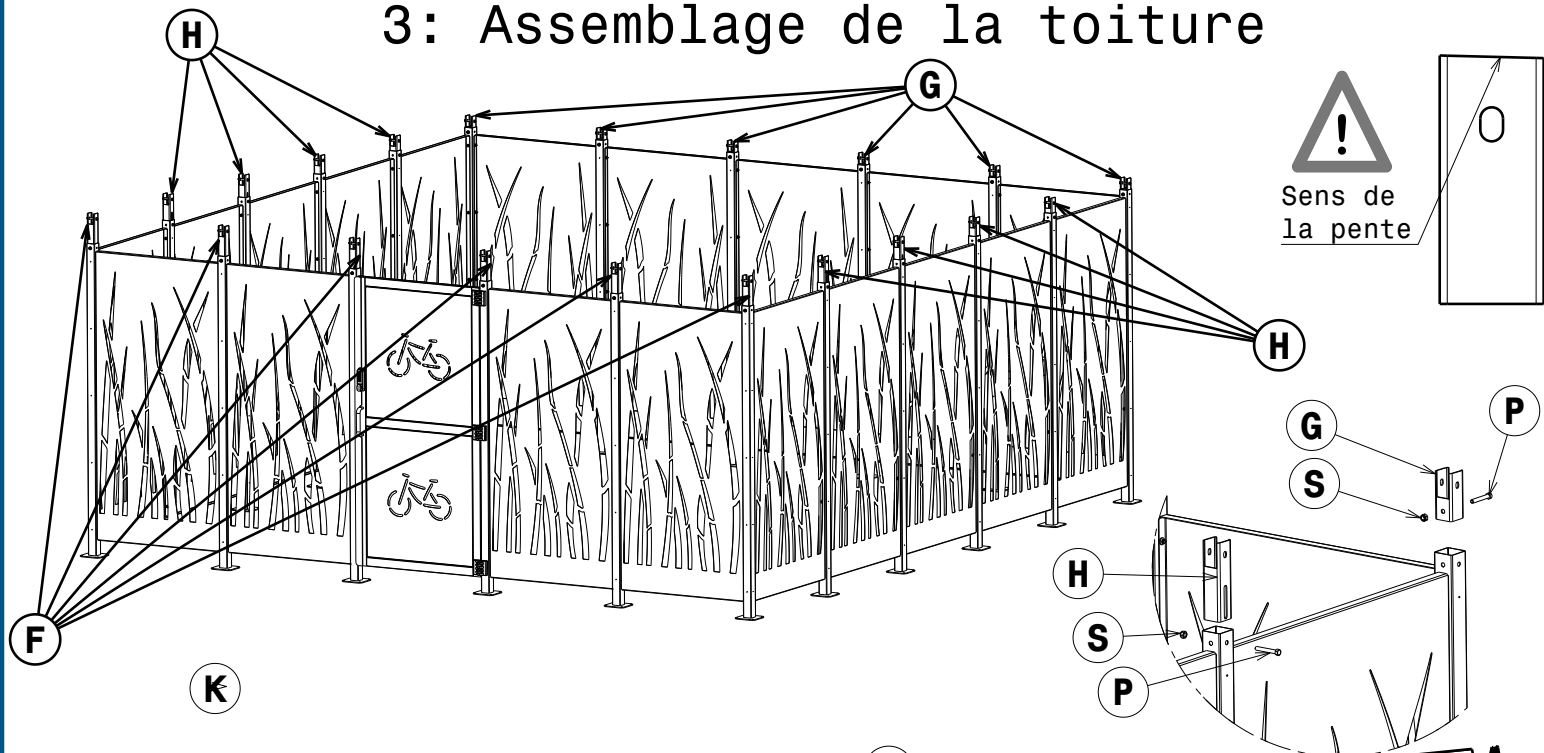

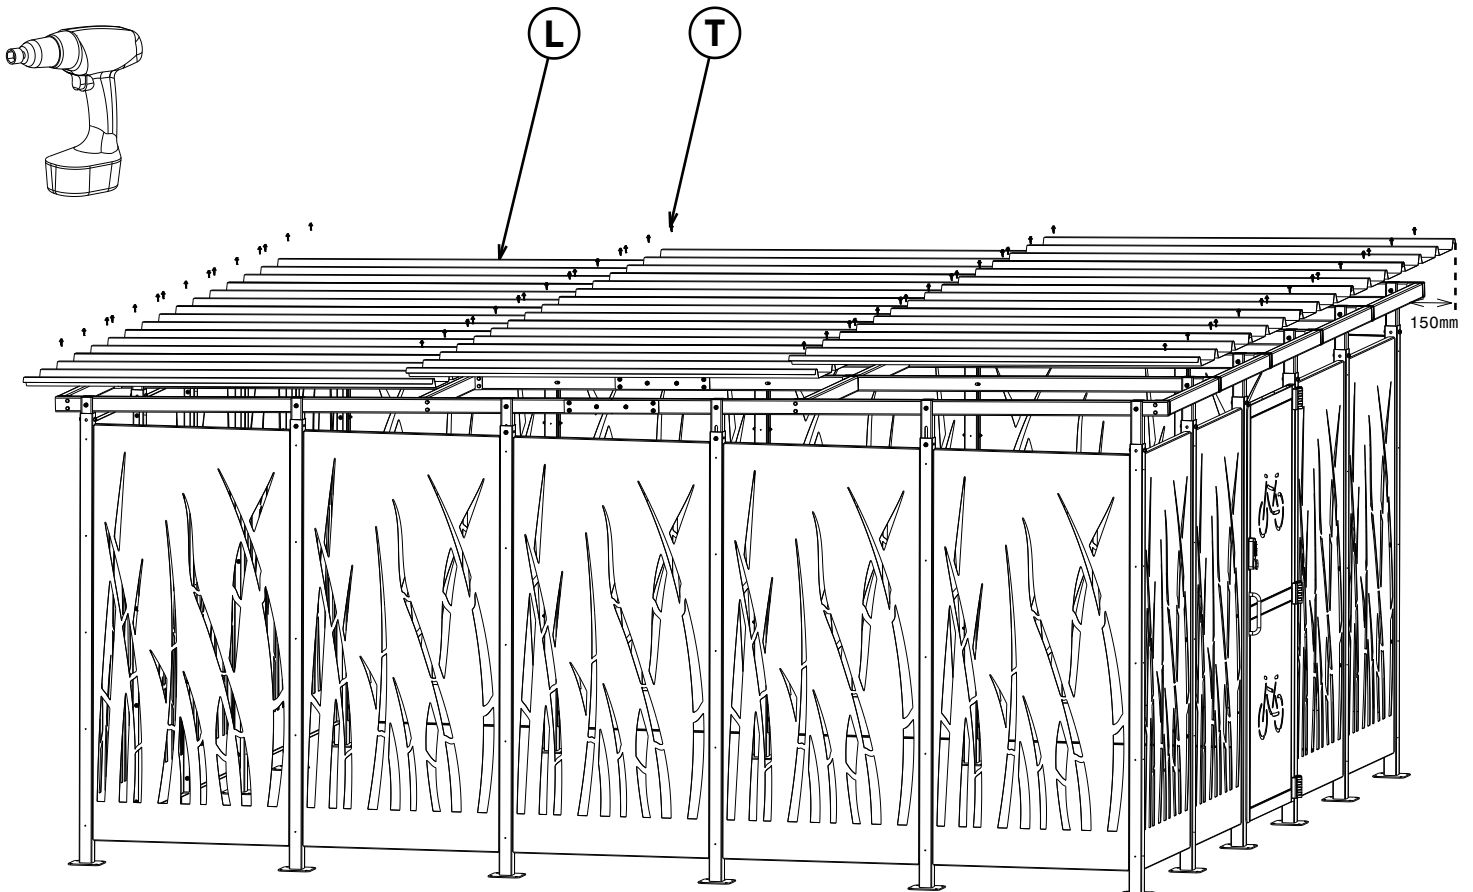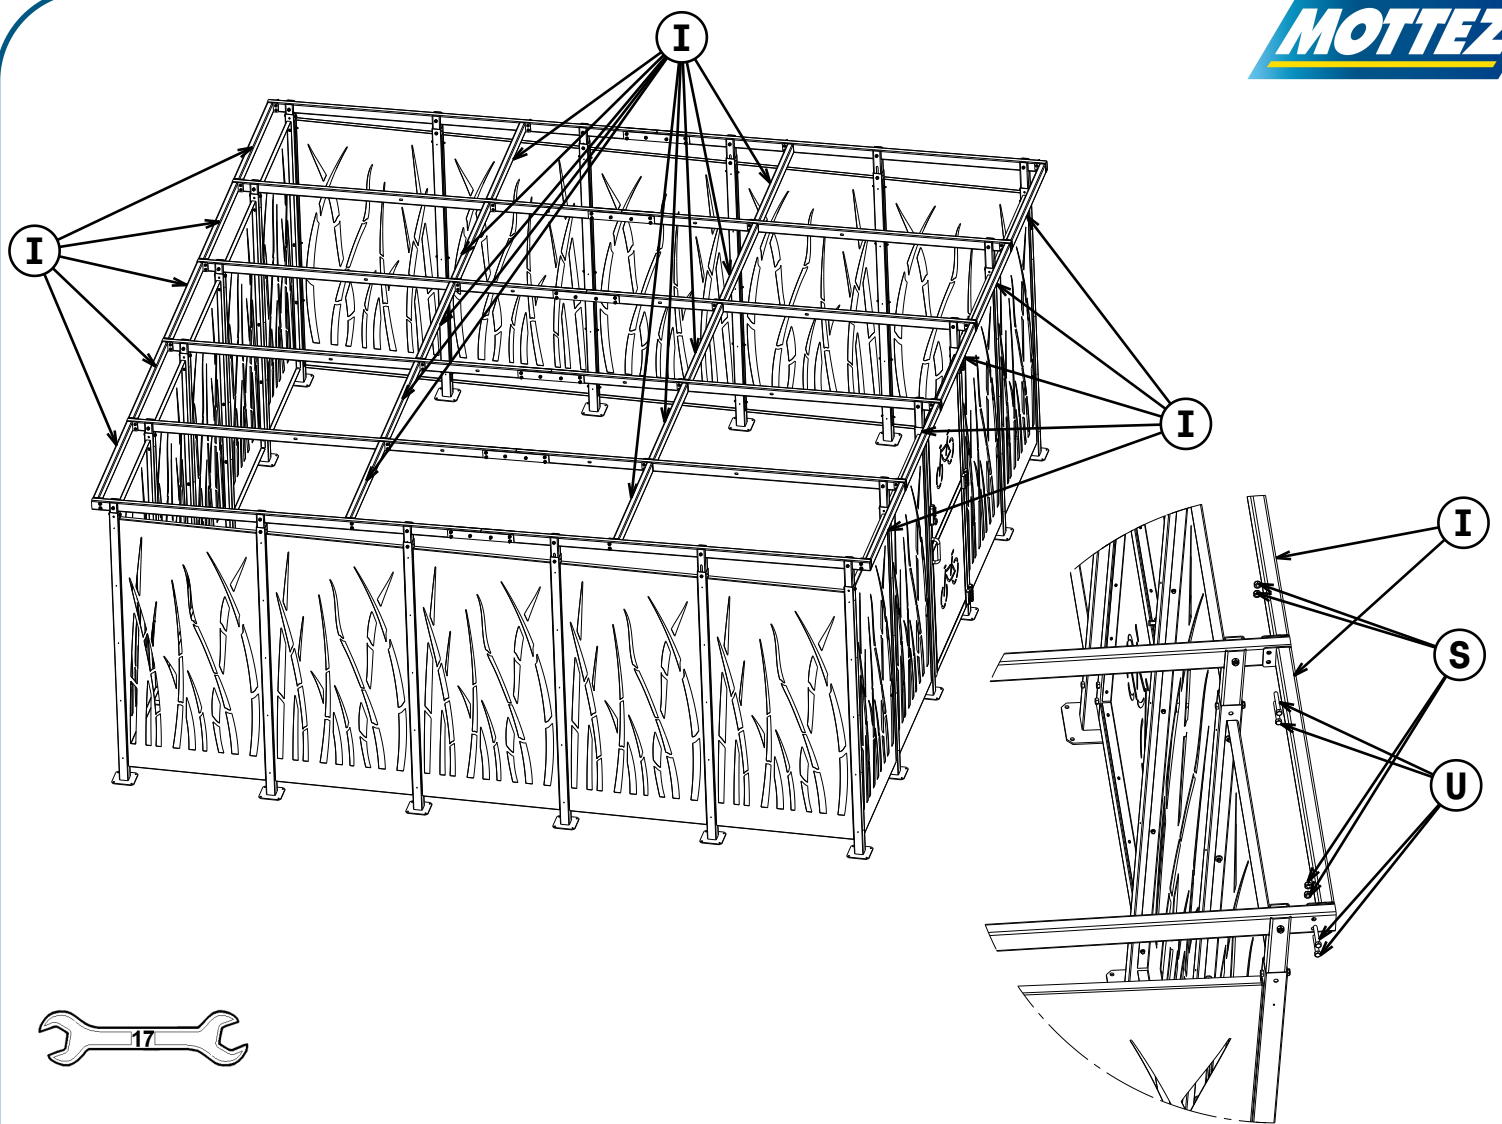


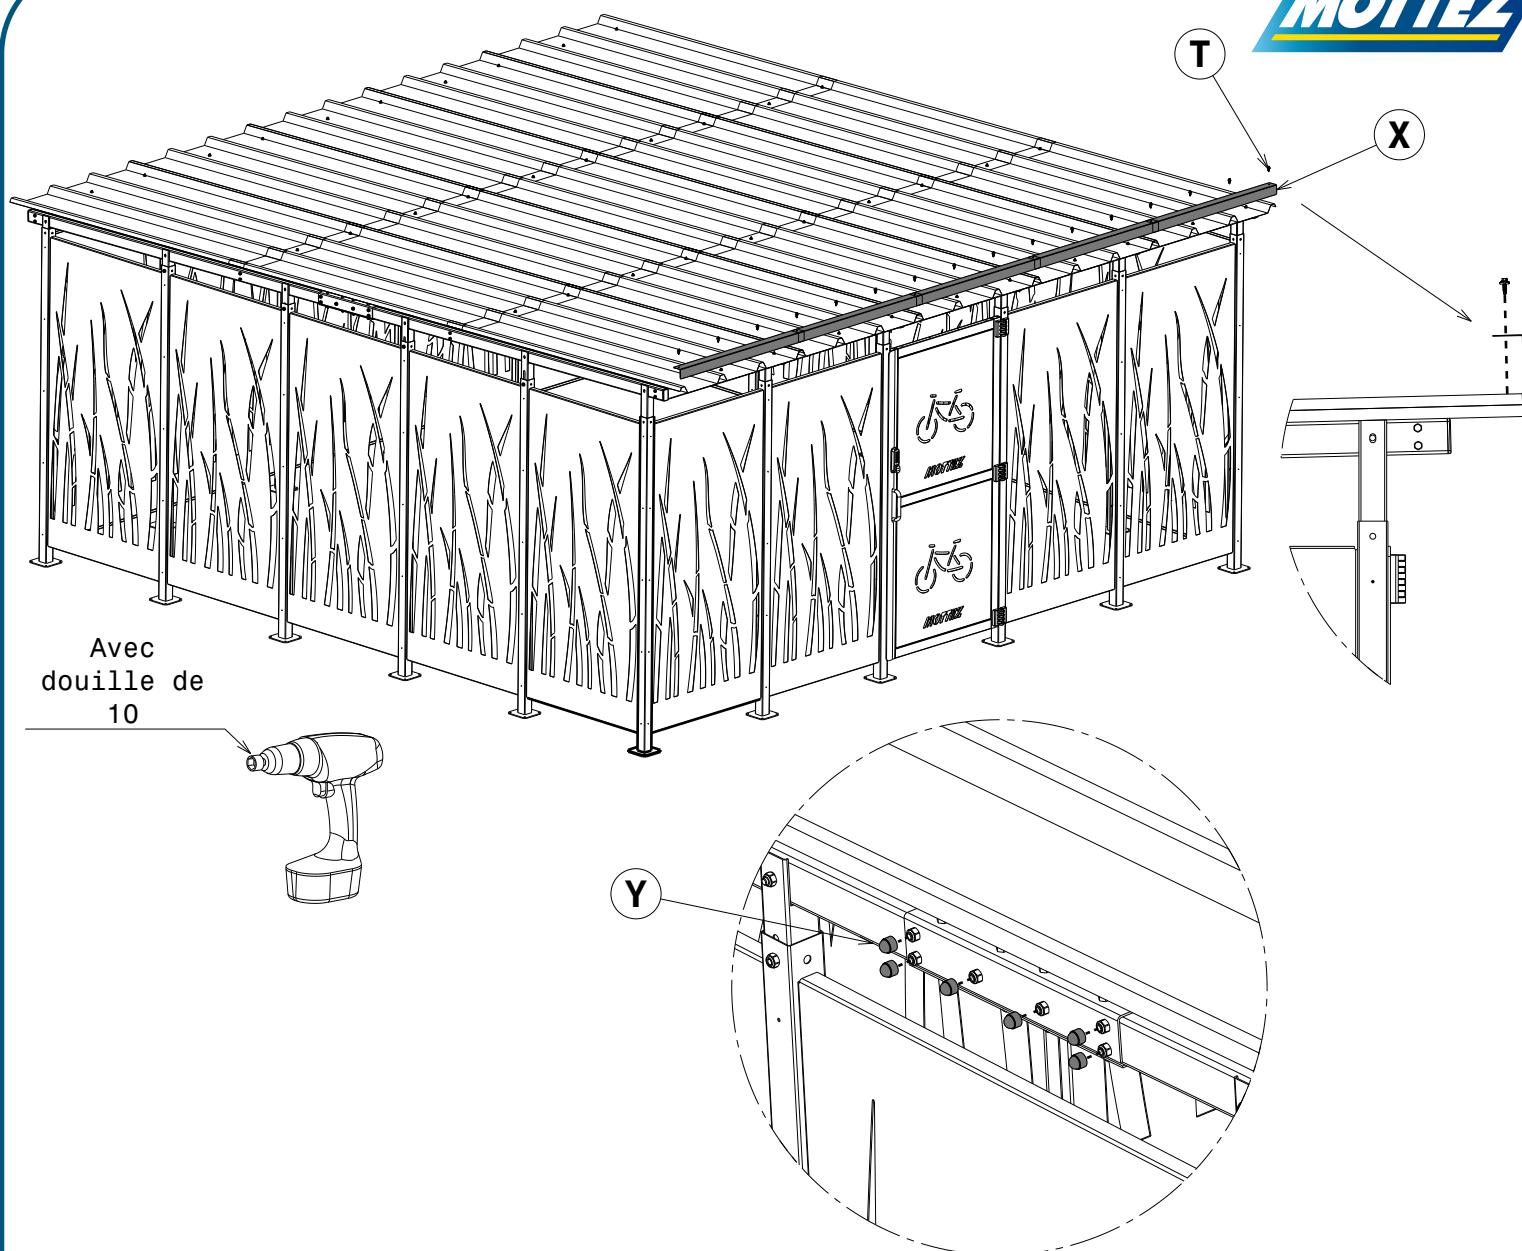

EXEMPLES DE MONTAGE

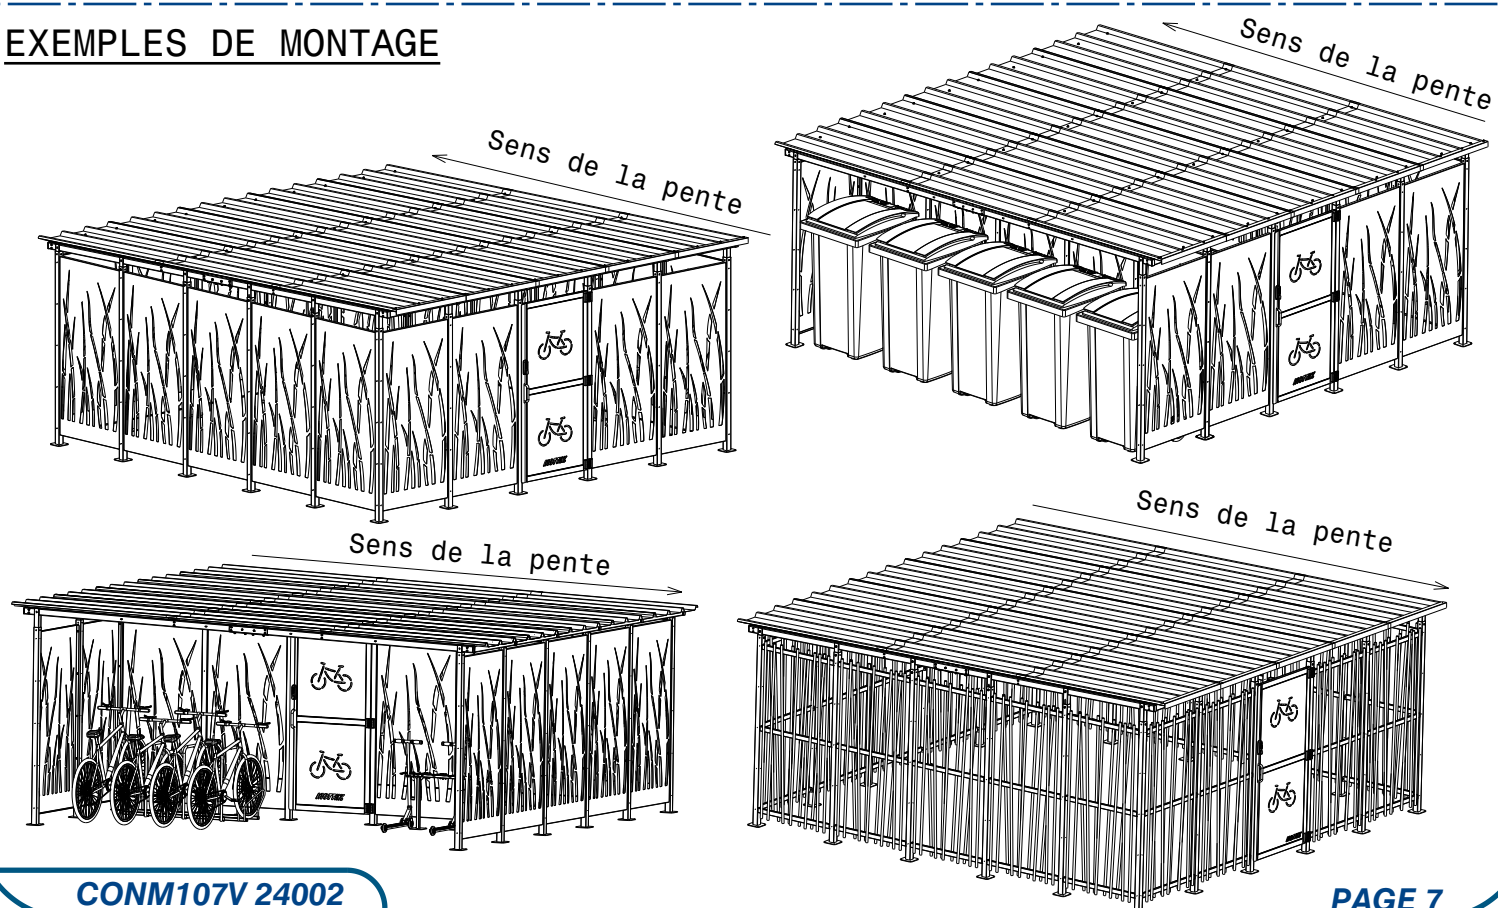

IMPLANTATION AU SOL

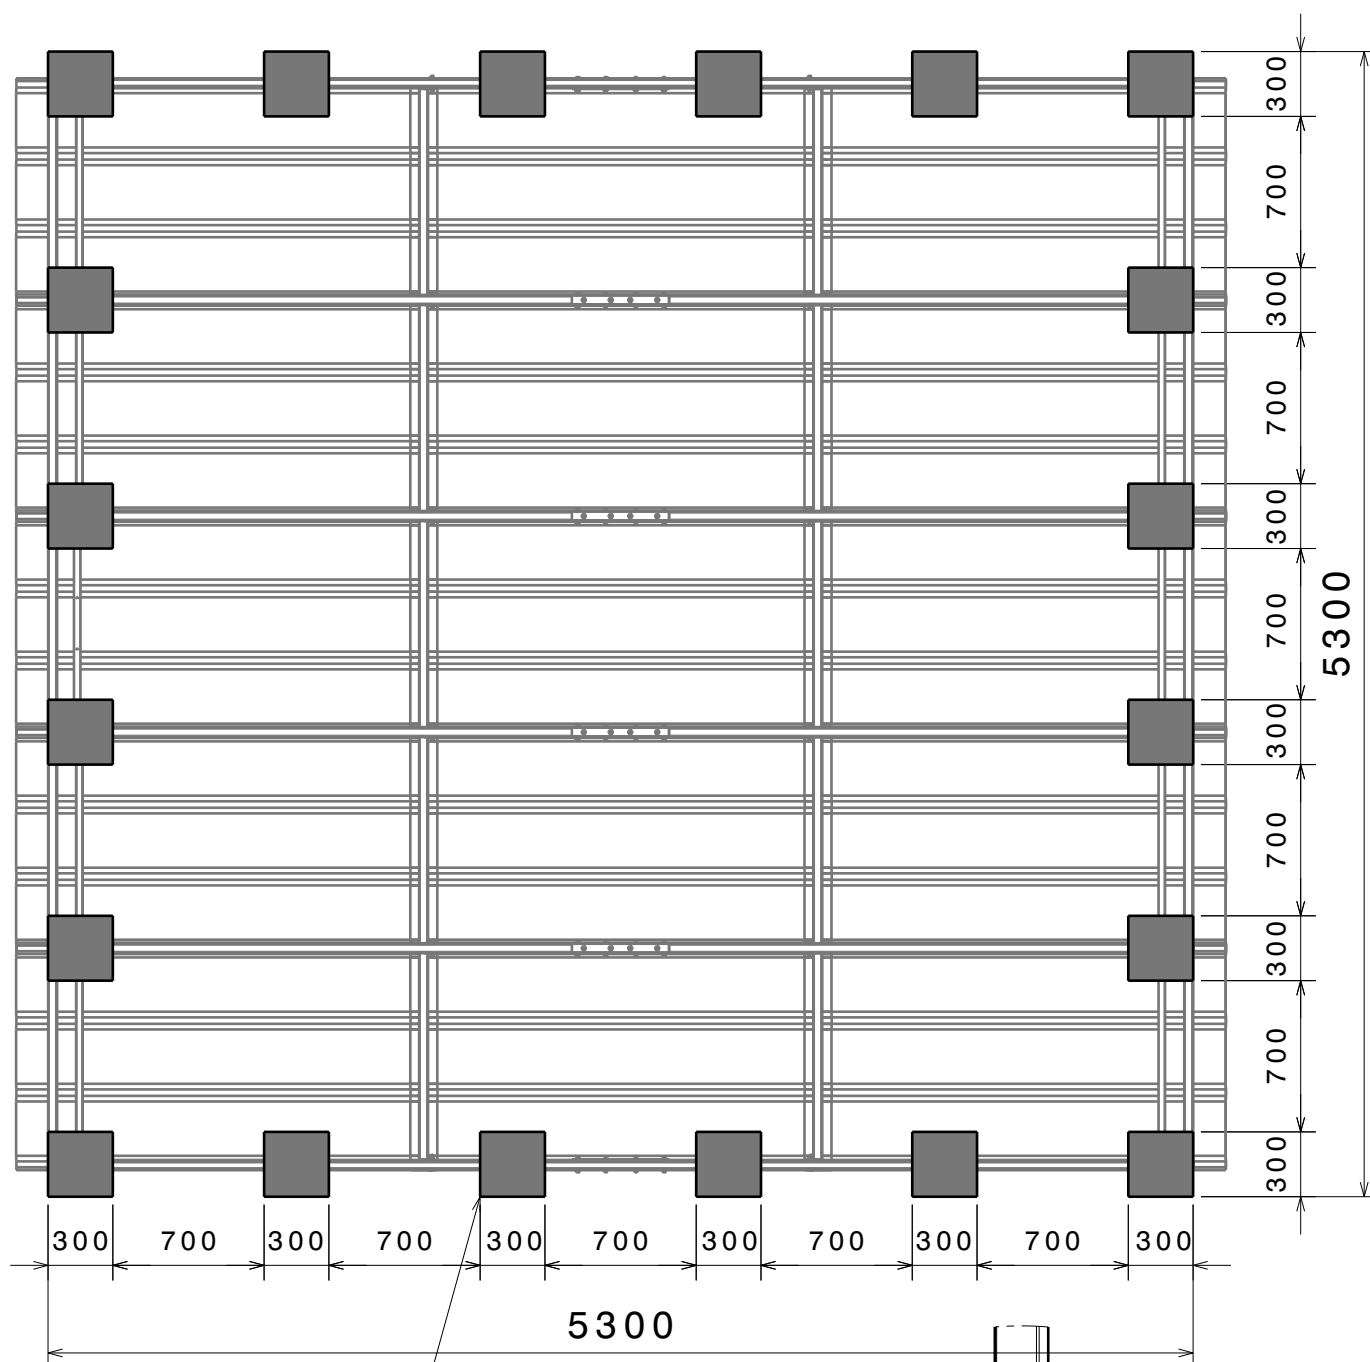

Plots béton
300x300x300mm

Fixations adaptées
(non fournies)

