


ABRIS GAMME M107V3








MOTTEZ

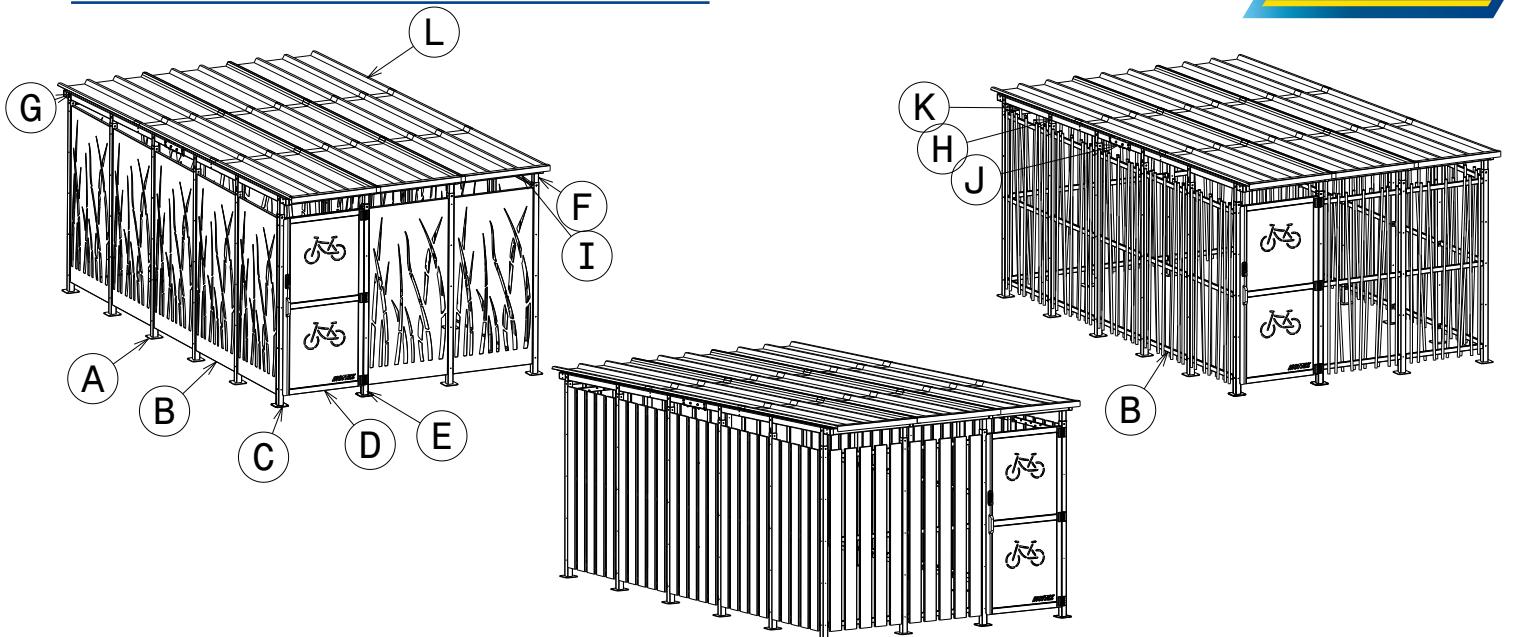

M107SE1N0	PRM10711GR	M107BAMSE1N0	M107SE5N0	M107SE20	M107SE4N0
x14	OU x15 VOIR NOTICE ANNEXE POUR LES PANNEAUX BOIS	x15	x1	x1	x1
M107SE7N0	M107SE8N0	M107SE101N0	M107SE9N0	PRM10717N0	
x4	x4	x8	x12	x8	
M107SE10N0			PRM10718		
		x8	x9		


CONTENU DU CARTON

MOTTEZ

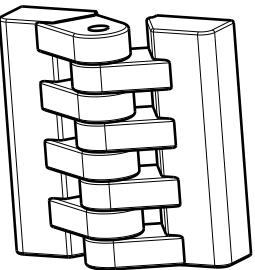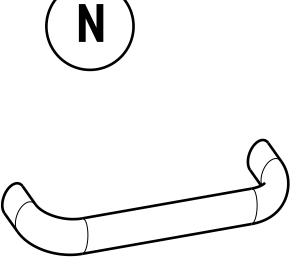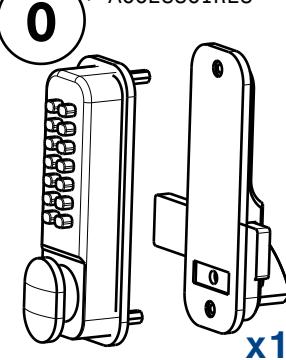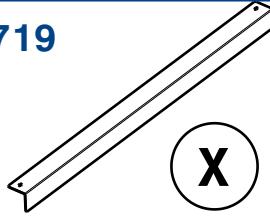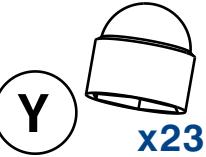
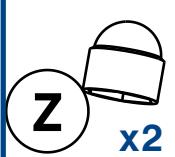
PRM02606  x3	PRM02619  x1	PRM02618N SERRURE DIGICODE + ACCESSOIRES  x1	VIH10 70  x38
			VIH10 45  x6
			VIH08 40  x2
VEH10NY  x120	VITH063 25 x215 ou x155  x1	VIH10 60  x60	VIH10 90  x16
PRM10719  x3	EMH10  x230	EMH08  x2	EMR70 40I  x8

OUTILS NECESSAIRES AU MONTAGE (non fournis)

2  5h



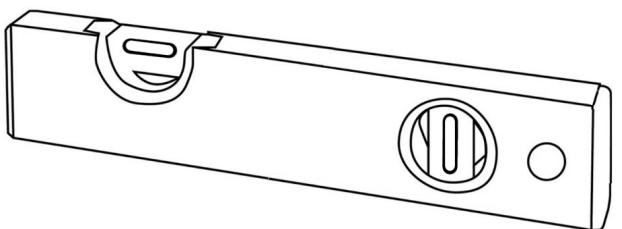


Avec douille de 10

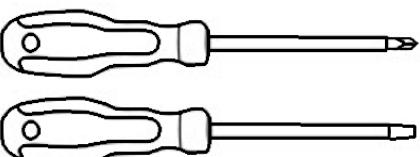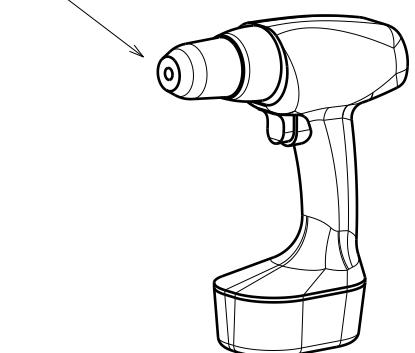



x1

x2 ou x4

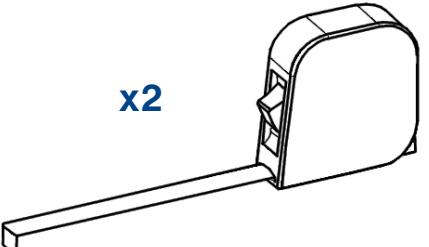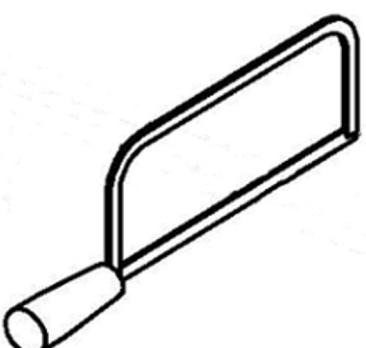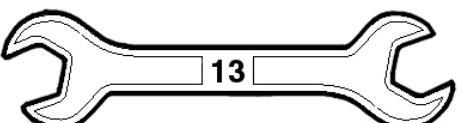


Scie à métaux


1: Assemblage des tôles sur les poteaux

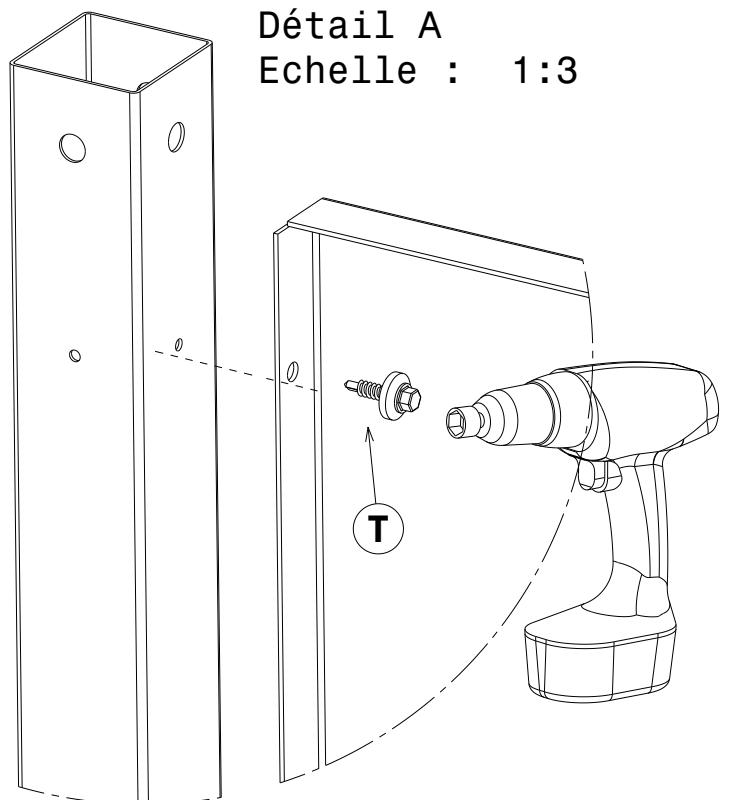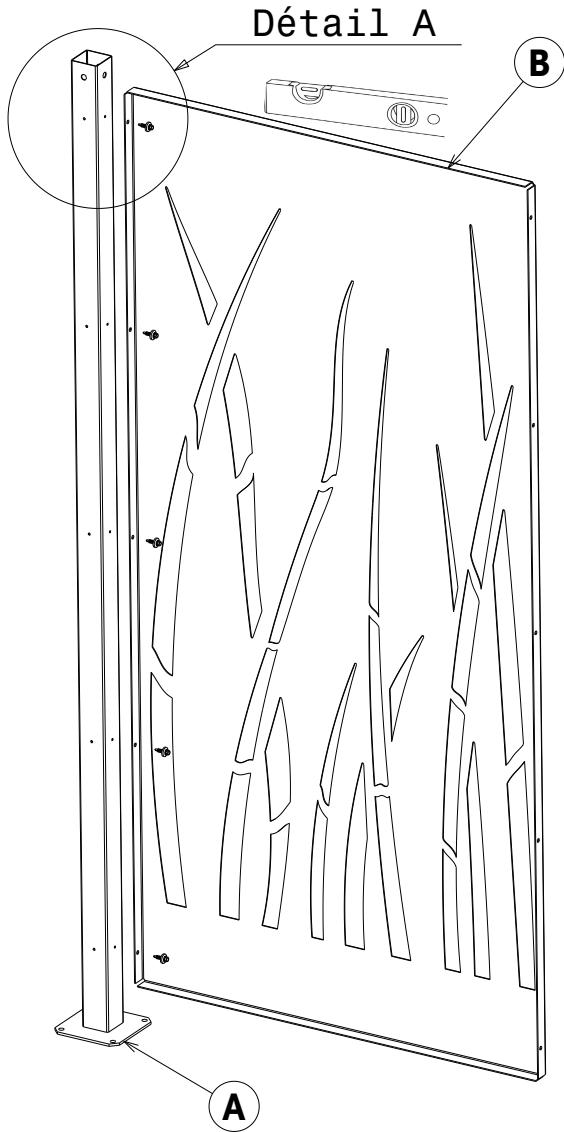





Poteaux spécifiques
pour la porte






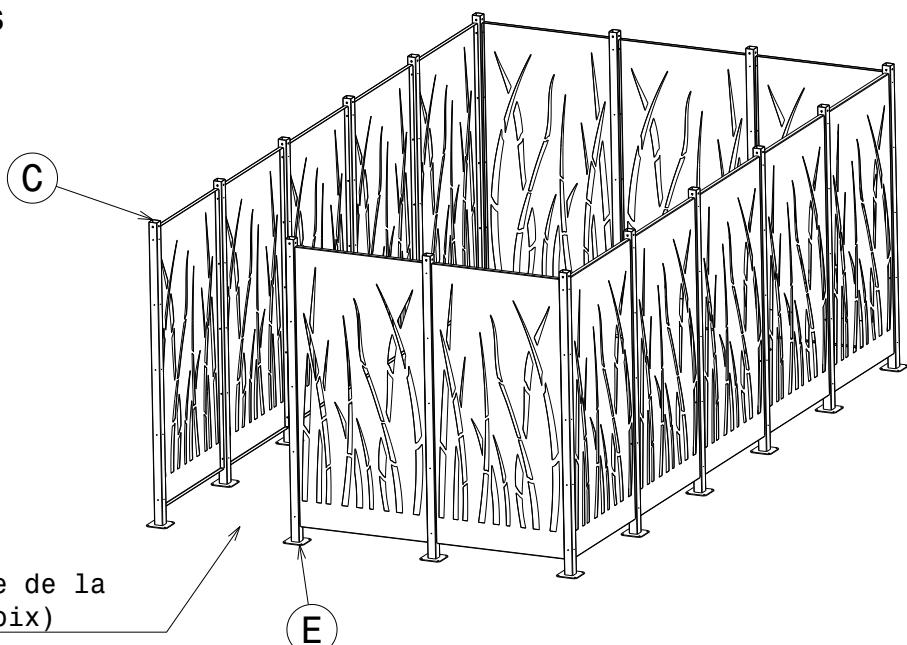





2: Assemblage de la porte

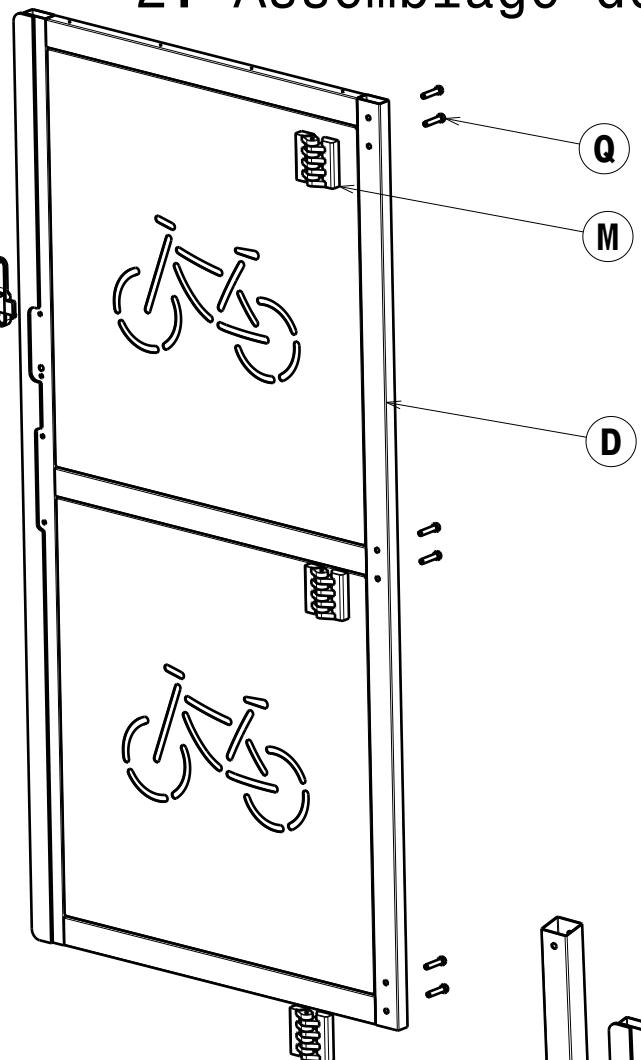


utilisation serrure: voir notice fournie

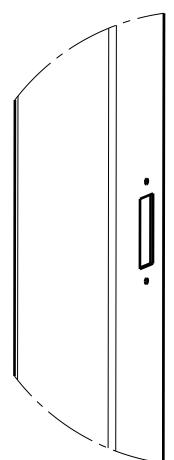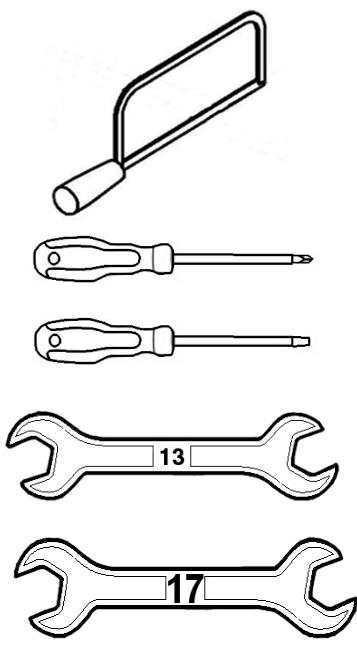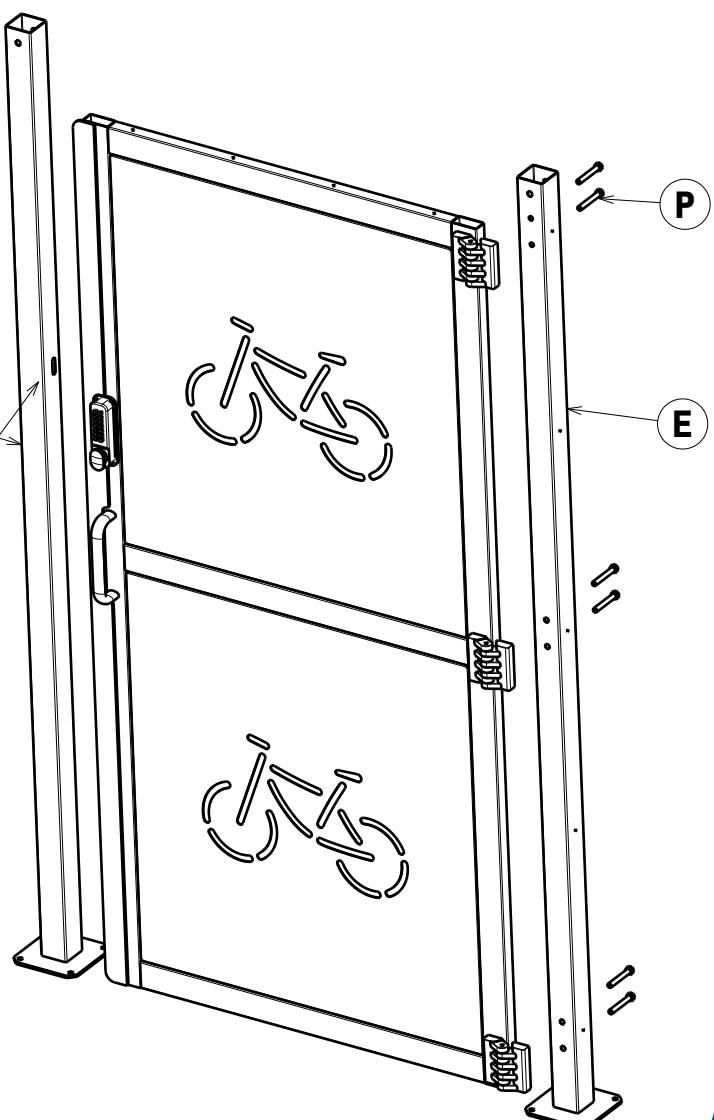
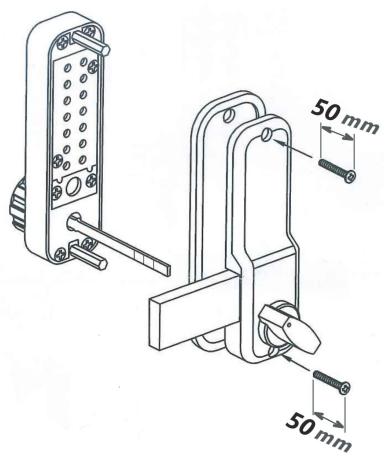


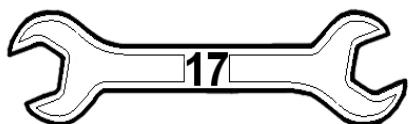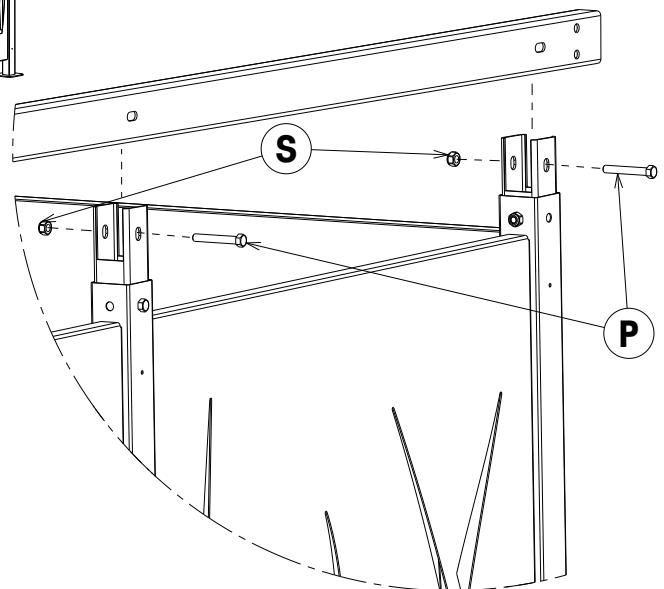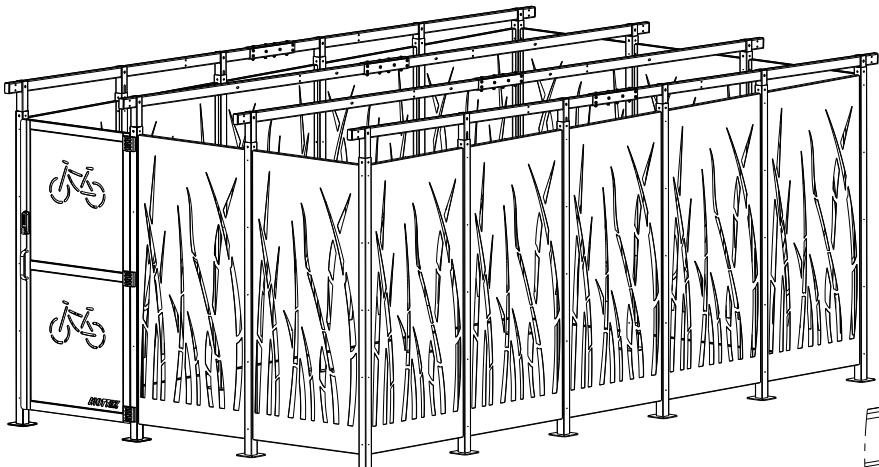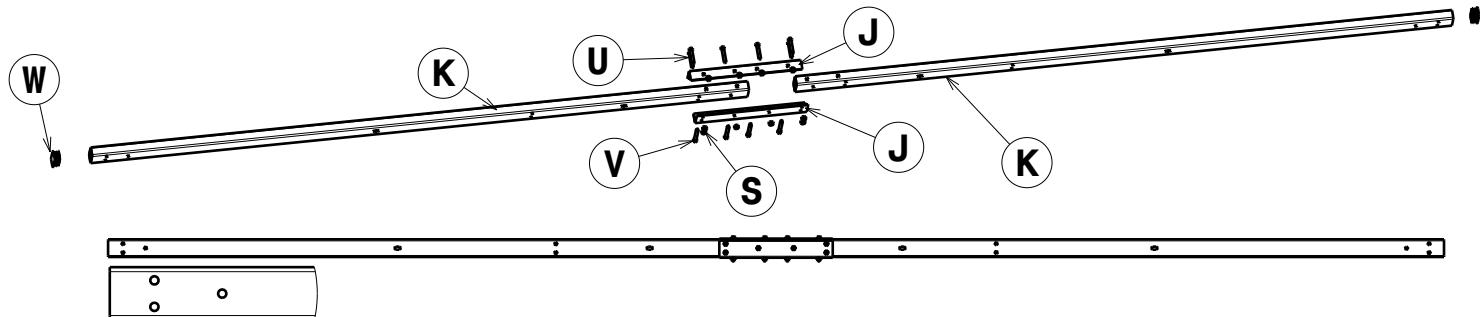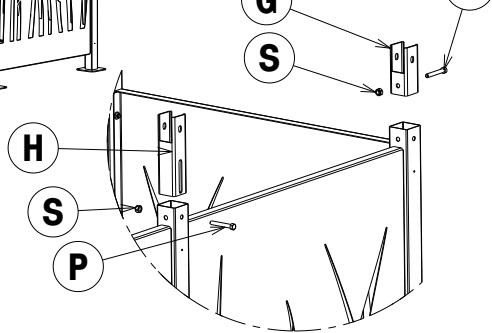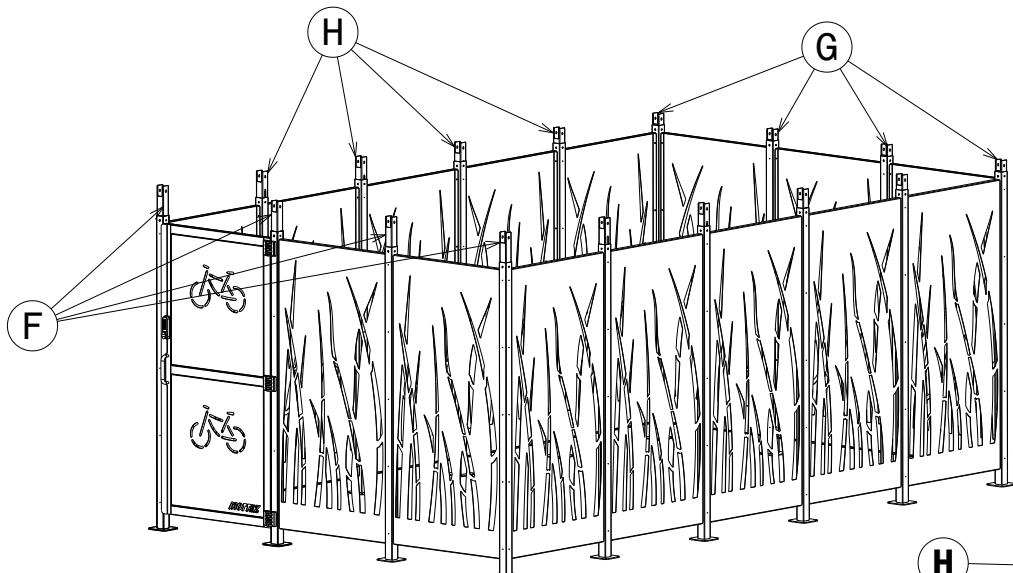

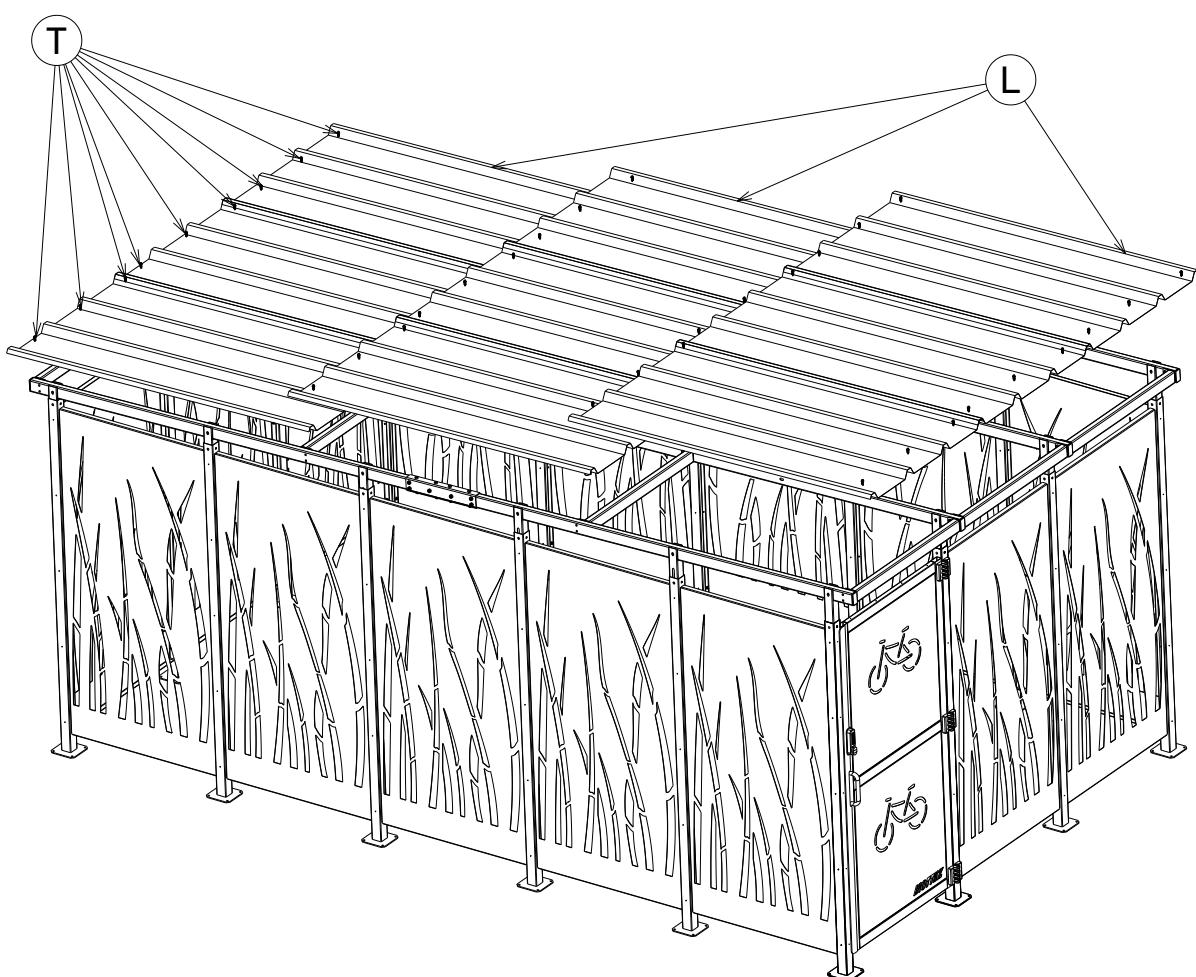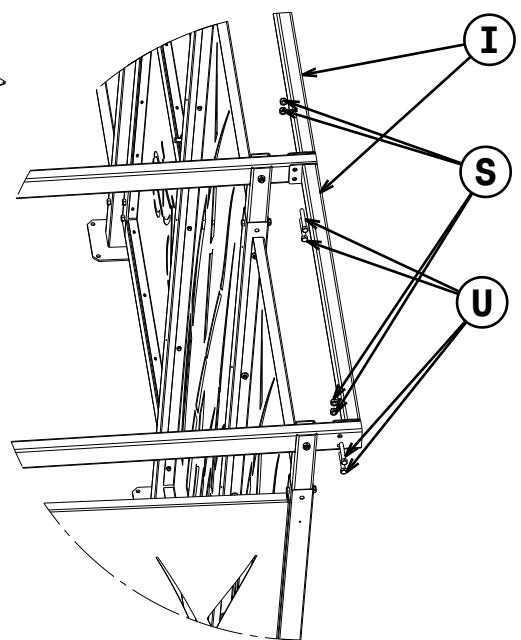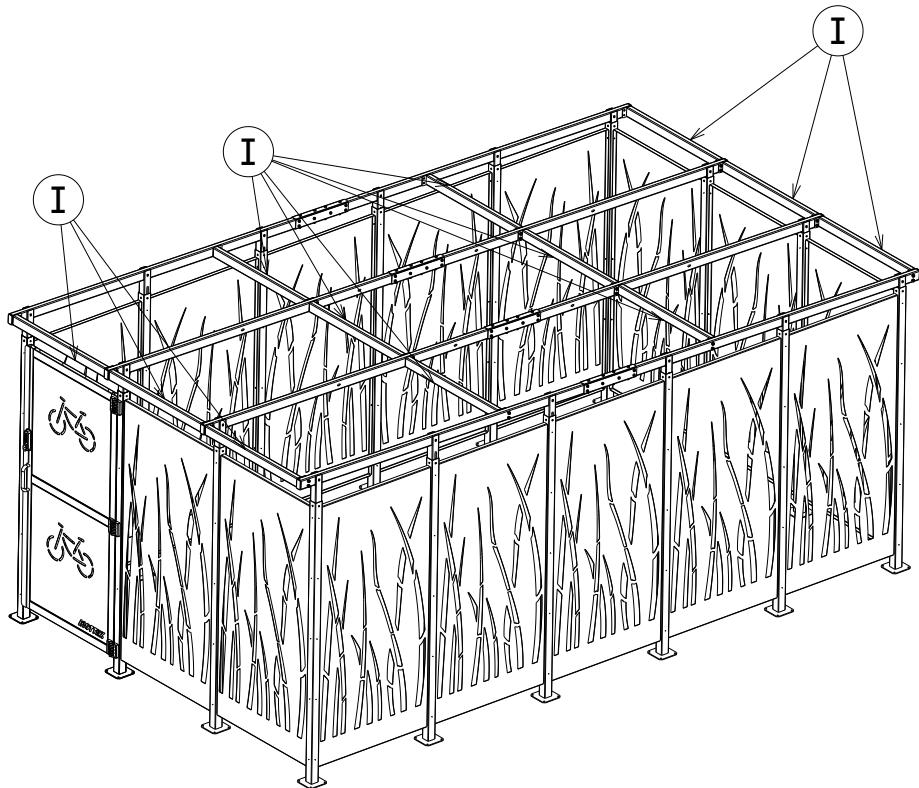

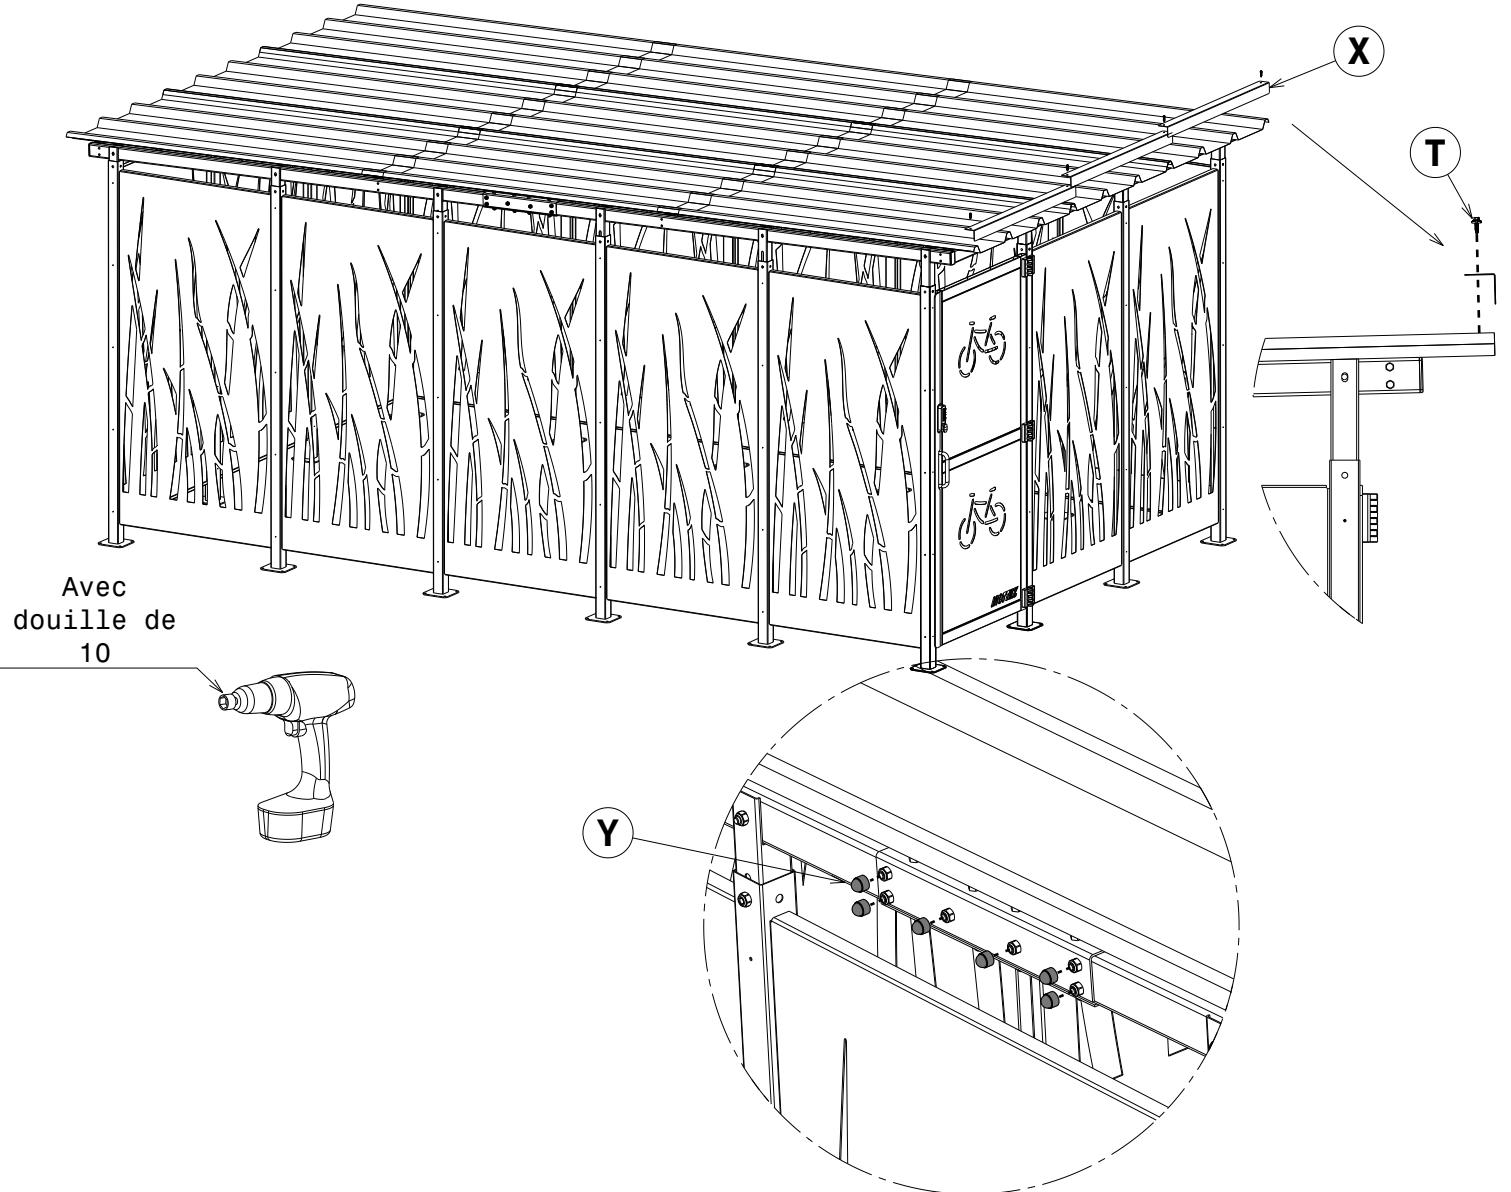

EXEMPLES DE MONTAGE

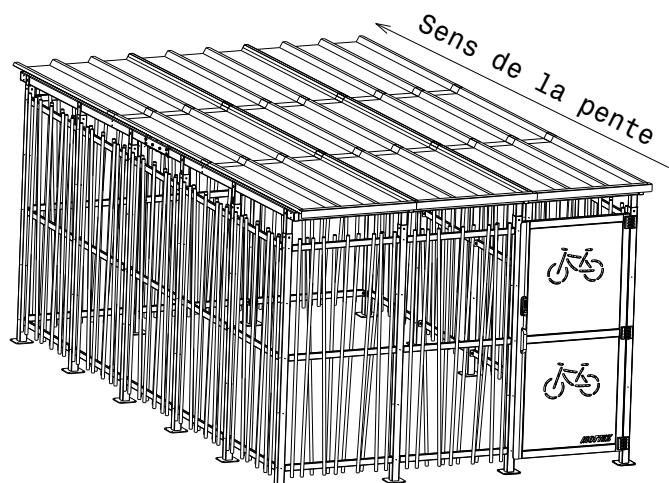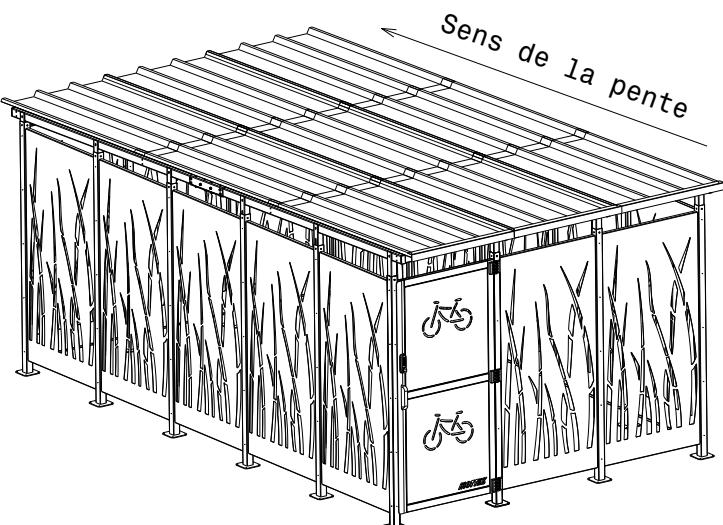

IMPLANTATION AU SOL

